DYNAMIX DW-E/H

User's Manual

CONTENTS

Chapter 1 Dynamix DW-E/H Introduction 5

System Description 5

Technical Specification 6

Audio Feature.....6

DW-E/H Appearance Description 8

Chapter 2 Log on DW-E/H.....9

Logon DW-E/H 9

Network Configuration 10

System Time Configuration 11

Account Manager.....13

Relogin.....14

Chapter 3 H.323 Gatekeeper and SIP Proxy Mode Configuration 15

Environment used in this chapter.....15

Interface Configuration.....16

T1/E1 Trunk Configuration.....17

H.323 Configuration 19

SIP Configuration 20

Digit Manipulation.....21

Chapter 4 Call Flow Editor.....25

Configuration Manager.....36

Apply Change 38

Chapter 5 Peer to Peer Mode Configuration.....39

Environment used in this chapter.....39

Network Configuration 39

Account Manager.....39

Interface Configuration.....40

H.323 Configuration 40

SIP Configuration 40

Address Book.....41

Digit Manipulation....42
Call Flow Editor....42
Configuration Manager....43
Apply Change....43

Chapter 6 Advance Configuration Reference....44

Configuration....44
System Configuration....44
Interface Configuration....45
T1/E1 Trunk Configuration....47
Dial Plan Configuration....50
H.323 Configuration....50
SIP Configuration....53
Access Control....58
Routing Plan....62
Radius Setting....63
Apply Change....65

Chapter 7 System Control....66

System....66
System Time....66
Timezone Setting....66
Network....68
SNMP....68
Prompt Manager....69
Call Flow Editor....75
Account Manager....75
Upgrade....75
Relogin....75

Chapter 8 System Monitor....76

Line Summary Status....76
Line Detail....77
Event Log....77
Debug Info....79

Ping 79
Remote Terminal 80

Chat 9 Telnet & RS-232 Configuration 81

Logon DW-E/H by Telnet 81

Chat 10 LCD Display Configuration 87

Appendix 1 Call Flow Example 90

One Stage Dialing (Gatekeeper Mode) 90
One Stage Dialing (SIP Proxy Mode) 92
One Stage Dialing (Peer to Peer Mode) 94
Two Stage Dialing (GK and SIP Proxy Mode) 96
Two Stage Dialing with AAA (GK and SIP Proxy Mode) 99

Appendix 2 Java plug-in Installation 102

Appendix 3 Retrieve CDR Information 103

Appendix 4 Quick Start Check List 105

Appendix 5 Interface LED Description 108

Appendix 6 Build-in Voice Prompt Index 109

Appendix 7 Timezone to Country Mapping List 110

Appendix 8 IP Bandwidth Requirement 112

Appendix 9 Release Complete Cause Code 113

DW-E/H FAQ 116

Quick Function Reference 120

Index 127

Chapter 1 DW-E/H Introduction

System Description

Dynamix DW-E/H is a cost effective solution for VoIP trunk gateway supporting one-, two-, or four-port T1/E1 VoIP trunks that provides voice and fax over IP network. It supports ITU-T H.323 V3, SIP RFC 2543/3261, SNMP V2, Call Detail Record, WEB management and other useful functions to meet customer requirements.

The built-in enhanced IVR (Interactive Voice Response) and Billing Service of Dynamix DW-E/H is suitable for prepaid and postpaid service. It can rapidly provide value added service for customers.

Dynamix DW-E/H V5.0 Features:

- Dual SIP/H.323 co-existing
- ITU-T H.323 v3 and H.450 compliance
- SIP RFC 2543/3261 standard compliance
- PSTN signaling: ISDN/PRI, CAS (MFC R2, MFC R1, E&M)
- Mixed SIP, Gatekeeper and P2P calls
- Support H.323 Gatekeeper register, direct and route calls
- Support SIP outbound proxy, redirect and register server
- Support SIP Overload Redirect
- SIP supplemental service - on Hold, Call Transfer (Transferred)
- Built-in phone book and prefix routing for SIP and H.323 P2P calls
- Support H.323 fast connect, early H.245 and H.245 tunneling
- Support H.323 and SIP early media
- Support RADIUS authorization and billing message
- Intelligent PSTN call routing and in-trunk hunting
- Flexible digit manipulation plan
- Support access control by ANI, DNIS, IP, Gatekeeper only, proxy only or RADIUS
- SIP UDP/TCP support
- Behind NAT friendly for SIP calls
- Inbound and out of band DTMF transmission
- SIP/H.323 T.38 fax relay up to 14400 bps
- Dynamic call treatment based on DNIS, ANI or collected DTMF
- Built-in IVR & call-flow controller
- CISCO compatible
- Web-based graphic announcement edit and management
- Multiple configuration saving
- Provides CDR (Call Detail Record)
- Built-in internal user authentication for prepaid & postpaid users
- MGCP (**)

Technical Specification

Interface
- Two 10/100MB Ethernet Ports (Host & VoIP stream)
- Up to 4 T1/E1 (**120 Ohm-RJ48C connectors)**
  75 Ohm needs external 3rd party BNC/RJ-48C adapter cables

Protocol and Standard
- ITUT H.323 v3 and H.450 compliance
- SIP RFC 2543/3261 compliance
- MGCP (**)

Audio Feature
- Codec -- G.711 A/μ-Law, G.723.1 (5.3K/6.3K), G.729A, G.729
- Support G.168 echo cancellation
- Configurable audio payload size & adaptive jitter buffer
- Support silent suppression for G.729A, G.723, G.729
- VAD (Voice Activity Detection)
- CNG (Comfort Noise Generation)

DTMF Transmission
- Transparent
- H.245 signal/alphanumeric
- H.323 Q.931
- RFC 2833
- SIP INFO

FAX Support
- Automatic voice/fax detection
- T.38 fax relay based on H.323 Annex D
- SIP T.38 fax relay
- Up to G3 fax
- ECM support
- Redundant T.38 packet (0-2)
- CISCO compatible

Built-in IVR & call-flow controller
- Web-based GUI Drag and Drop interface
- Full control of call behavior (one-stage or two-stage dialing)
- IVR functions
- Support time duration play back (Chinese & English)
- Power call information branch
- Collected information validation
- Active disconnect & reconnect without hang up
- Selected disconnect cause code & behavior

Management Feature
- OS and program upgradeable
- Console port: RS-232 port
- TELNET

- Full Web management interface & real time monitor
- Front panel LCD
- SNMP v2 (H.341) and SNTP v4 support
- User account management
- Time zone and day light saving support
- Support fixed IP and DHCP
- Support DNS and dynamic DNS

LED indicators for system status

- Power/Storage access indicators
- Front panel LCD (2 ^{lines} X 16) status display

Power

- 90~240V auto switch

Environmental

- Operation temp: 0° C to 60° C
- Relative humidity: 5% to 95%

Dimension

- 483mm(L) x 450 mm(W) x 44mm(H)

Certification

- CE, FCC, EMI

DW-E/H Appearance Description

DW-E/H Front Panel:

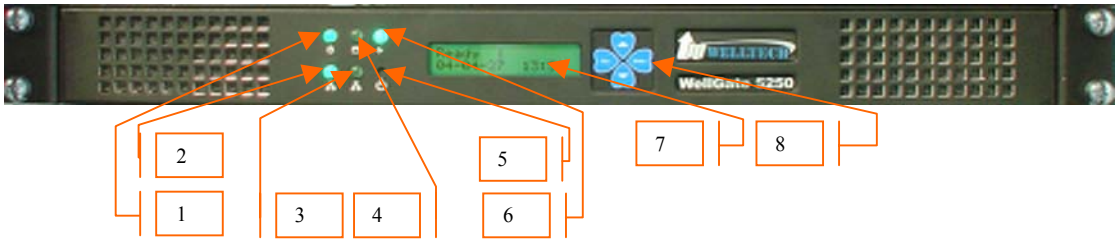

Functions:

1: Power LED
2: Network1 Interface LED
3: Network2 Interface LED (not used)
4: H/D LCD
5: Power Switch
6: System Status LED
7: LCD Panel
8: LCD Touch Panel

DW-E/H Rear Panel:

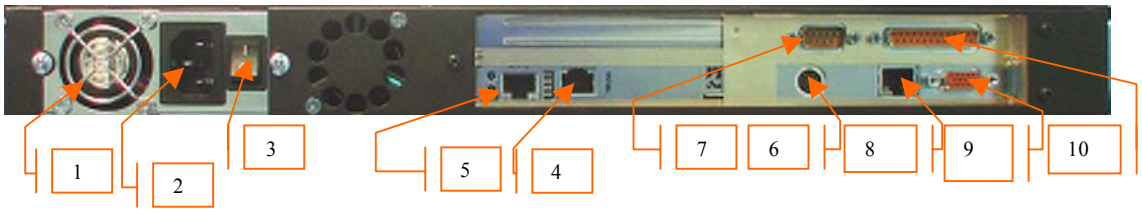

Functions:

1: Electric Fan
2: AC Power outlet
3: AC Power switch **(Keep on)**
4: Trunk E1/T1 port
5: VoIP Enternet port
6: Keyboard/Mouse
7: Com1 port
8: Enternet port
9: VGA
10: print port (not available)

Chapter 2 Logon DW-E/H

After connected E1/T1 & Ethernet cables into the DW-E/H, turned on the power. The first step is to logon the system and set up the IP address.

Before you can use the Browser to config DW-E/H, you need to have Java Standard Runtime (1.3.1 (preferred) or later version) to make it work. Please refer to **Appendix 2 Java plug-in Install** for detail.

Logon DW-E/H

Setp1: Start IE5.0 (or later version) to navigate DW-E/H Management System by typing the default IP address (the default URL is http://192.168.111.111:10087). The screen will display **User ID** and **Password** as figure 2.1-1.

Figure 2.1-1

☻ ***Note: The default network IP address is 192.168.111.111 and subnet mask is 255.255.0.0***

Step 2: Enter log user name and password (the default user id is root and user password is root). You can manage your user account via web (refer to Section "**Account Manager**") later.

Figure 2.1-2

Step 3: The screen shows the Home Page of DW-E/H as figure 2.1-3.

Figure 2.1-3

Network Configuration

Step 1: After successfully logon to the system, we need to change the network configuration. Click **Control→Network** to setup the network parameters as figure 2.2-1.

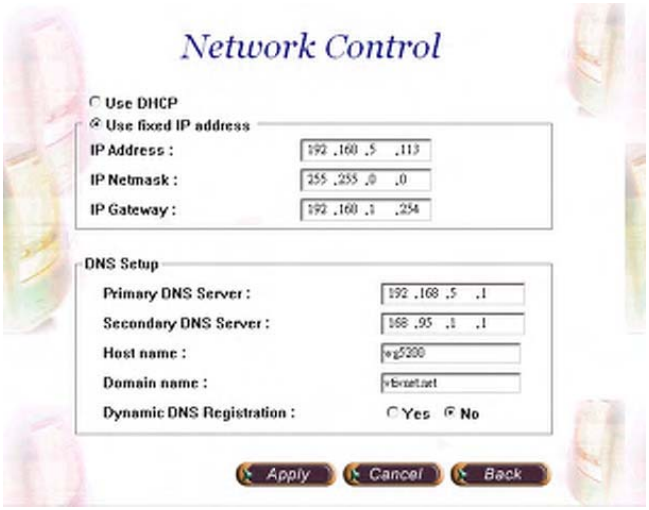

Figure 2.2-1

Step 2: Enter the deserved IP address, Submask and default gateway. Apply the change by clicking **apply** button as figure 2.2-2.

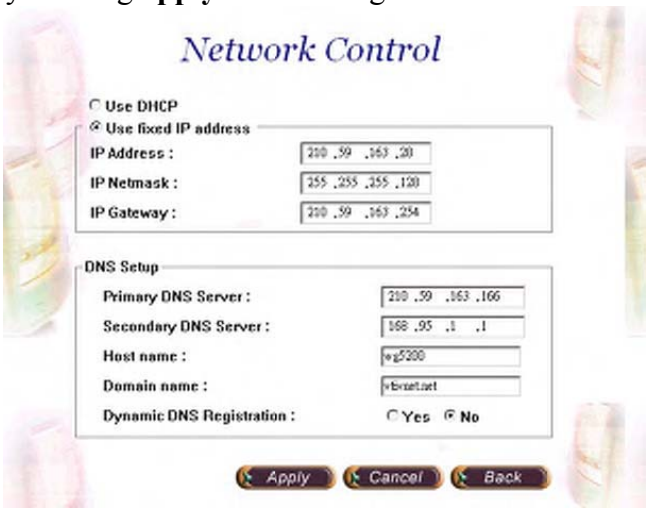

Figure 2.2-2

Step 3: When screen shows **"*Setup network configuration successfully!*"** It means the IP Network setting is successfully changed as figure 2.2-3.

Figure 2.2-3

☻ ***Note: "Network Control" takes around 5-second to apply the new network configuration. Please logon again with new IP address after 5 seconds.***

System Time Configuration

Step 1: When relogon to the new IP address; the next is to setup the system time zone. Click **Control→System Time Zone** to setup the system as figure 2.3-1.

Figure 2.3-1

Step 2: After apply the new time zone, click **Back** to adjust the date and time as figure 2.3-2.

Figure 2.3-2

Step 3: Enter current date and time. Apply the change by clicking **Apply** button as figure 2.3-3.

Figure 2.3-3

Step 4: The screen will shows ***"Setup system time successfully!"*** It means the **System Time** setting is successfully changed as figure 2.3-4.

Figure 2.3-4

Step 5: If you would like to use SNTP to sync time with a SNTP V4 Server, click **Time Sync** button to setup it as figure 2.3-5.

Figure 2.3-5

Account Manager

Step 1: You can manage your user account by click **Control→Account Manager**. To add a new user account, Click **New** button as figure 2.4-1.

Figure 2.4-1

Step 2: Enter the new user ID, password, user role and description, as you need. Apply the change as figure 2.4-2.

Figure 2.4-2

Field Description:

- User ID: Login User ID
- Password: Login Password
- Confirm Password: Confirm new password again

Step 3: When screen shows ***"Create user account successfully!"*** It means user account setting is successfully created as figure 2.4-3

Figure 2.4-3

☻ ***Note: The system provides 2 USER ID by default:***
User 1: "root" Password: "root"
User 2: "admin" Password: "admin"

Relogin

Step 1: Click **Control→Relogin** to relogon by another user account as figure 2.5-1.

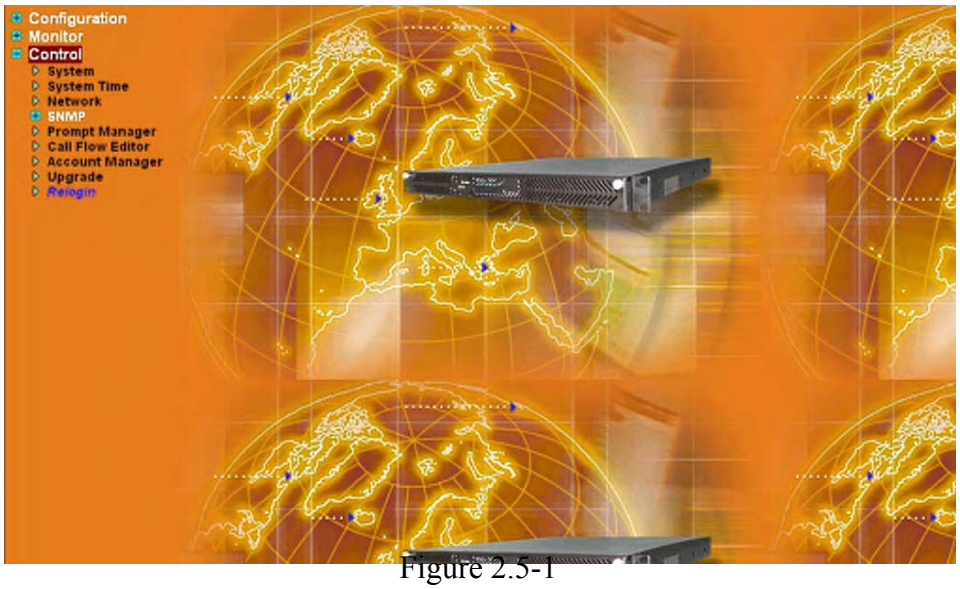

Figure 2.5-1

Step 2: Enter new User ID and Password to relogon the DW-E/H as figure 2.5-2.

Figure 2.5-2

Step 3: The screen shows the Home Page of DW-E/H as figure 2-5-3.

Figure 2.5-3

Chapter 3 H.323 Gatekeeper and SIP Proxy Mode Configuration

Environment used in this chapter

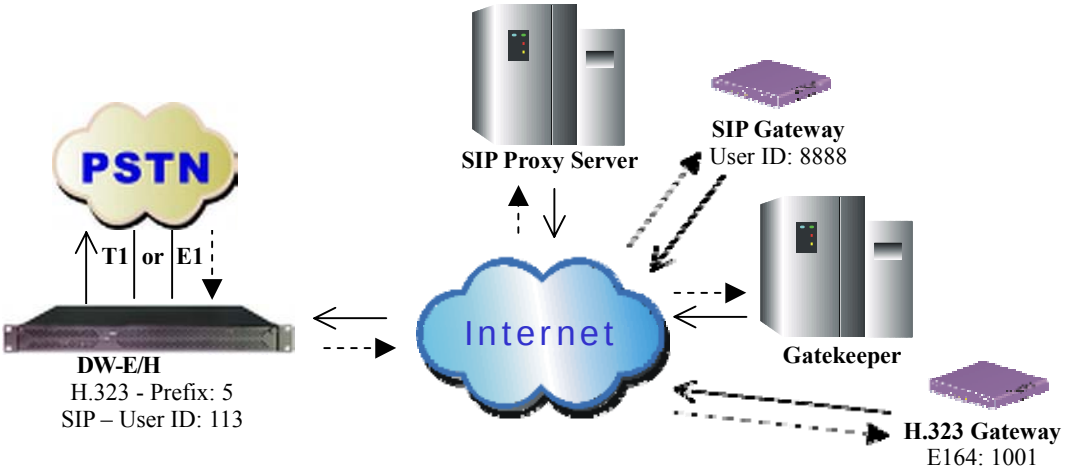

Process:

PSTN → H.323 Call: DNIS (1001) → Make H.323 - Gatekeeper Call (1001)
→ SIP Call: DNIS (8888) → Make SIP – SIP Proxy Call (8888)

H.323 → DNIS (5932111222) → DM (H.323_in_drop) → Make Call (0932111222)
SIP → DNIS (11382265699) → DM (SIP_in_drop) → Make Call (82265699)

Interface Configuration

This section is going to setup the VoIP interface.

Step 1: Now we are going to setup the VoIP interface, click **Configuration→ Interface** to setup VoIP T1/E1 interface as figure 3.1-1.

Figure 3.1-1

Step 2: Double-click the installed interface (i.e Interface ID:0) to config it as figure 3.1-2.

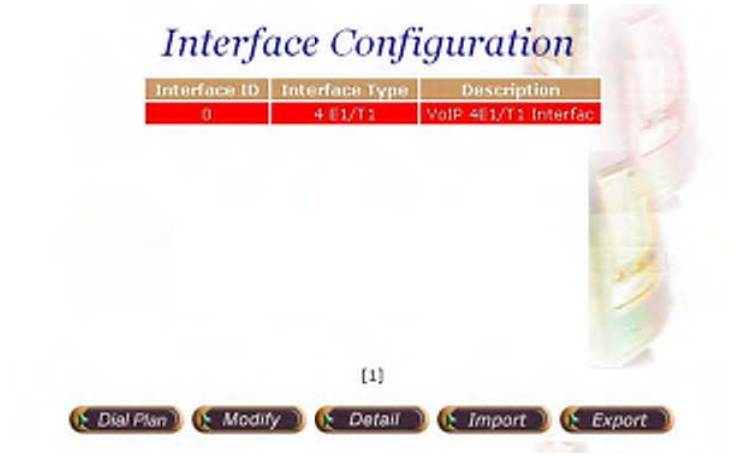

Figure 3.1-2

Step 3: Modify the VoIP Interface parameters (i.e. IP Address, Protocol Tag, Subnet Mask and Default gateway) and apply the change by clicking **Apply** as figure 3.1-3.

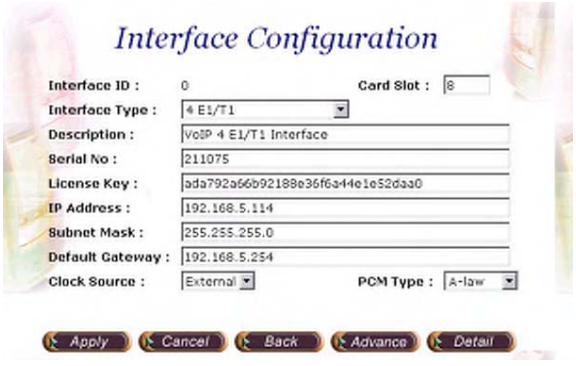

Figure 3.1-3

Frequency changed parameters: (Refer to section "Interface Configuration" for more detail)

- IP Address: 192.168.5.114
- Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.5.254
- Clock Source: External or internal (for PSTN)
- PCM Type: A-law or Mulaw

☻ ***Caution: Subnet Mask does not support Supernet.***

Step 4: After successfully to changed the Interface configuration, the screen come back the page of **Interface Configuration** as figure 3.1-4.

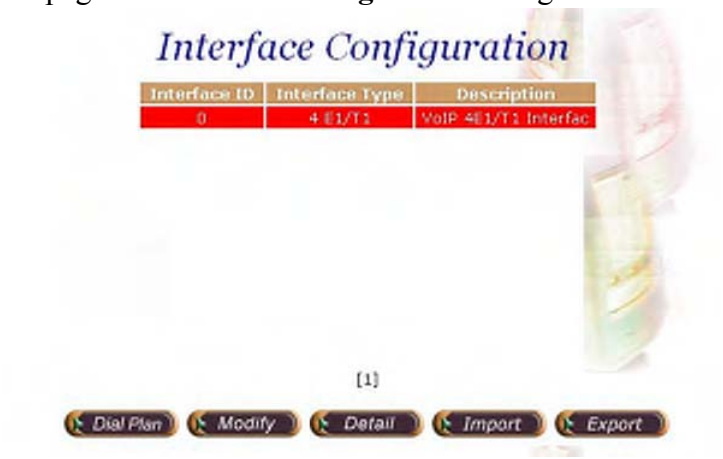

Figure 3.1-4

T1/E1 Trunk Configuration

This section is going to setup the PSTN trunk parameters.

Step 1: Select the installed interface to modify the trunk parameter by click **Detail** button as figure 3.2-1.

Figure 3.2-1

Step 2: Select the trunk to be modified, and click **Modify** button as figure 3.2-2.

Figure 3.2-2

Step 3: Modify the trunk parameters (i.e. Trunk Type, Termin Side, Trunk Mode, Protocol Tag, Line Code) and apply the change by clicking **Apply** as figure 3.2-3.

Figure 3.2-3

Frequency Changed Parameters:

- Trunk Type: E1 or T1
- Termin Type: User Side or Network Side
- Trunk Mode: Normal
- Protocol Tag: ISDN protocol used
- Line Code: T1 or E1 line code used

Step 4: After successed to change the Trunk Configuration, the screen comes back the page of **Trunk Configuration** as figure 3.2-4.

Figure 3.2-4

H.323 Configuration

This section is going setup the H.323 parameter. If you only need SIP calls, you can skip it.

Step 1: Click **Configuration→H.323** to setup the H.323 parameters for Gatekeeper related information as figure 3.3-1.

Figure 3.3-1

Frequency used parameters:

- Register to Gatekeeper: Yes
- Gatekeeper IP: 192.168.5.1
- E.164 Tel: 113
- Register H.323 ID: 113

Step 3: You can see the screen display the new configuration of the **H.323 Configuration** as figure 3.3-3.

H.323 Configuration
Register To Gatekeeper : Yes
Gatekeeper IP : 192.168.5.1
Gatekeeper RAS : 1719
E.164 Tel : 113
Register H.323 ID : WG113
Register Time To Live (sec) : 60
Response Timeout (Q.931) (sec) : 60
Connect Timeout (Q.931) (sec) : 60
DTMF Relay : H.245 - Alphanumeric
Fax Transport : T.38 Fax Relay (H.245 Mode)
Fast Connect Mode : Enable Fast Start Both Site
H.245 Tunneling : Disable
H.450 Service : Disable H.450
FS Enable 1
Codec Priority 1 : G.723 High
FS Enable 2

Figure 3.3-3

SIP Configuration

This section is going setup the SIP parameter. If you only need H.323 calls, you can skip it.

Step 1: Click **Configuration→SIP** to setup the SIP parameters for SIP Proxy Server related information as figure.3.4-1.

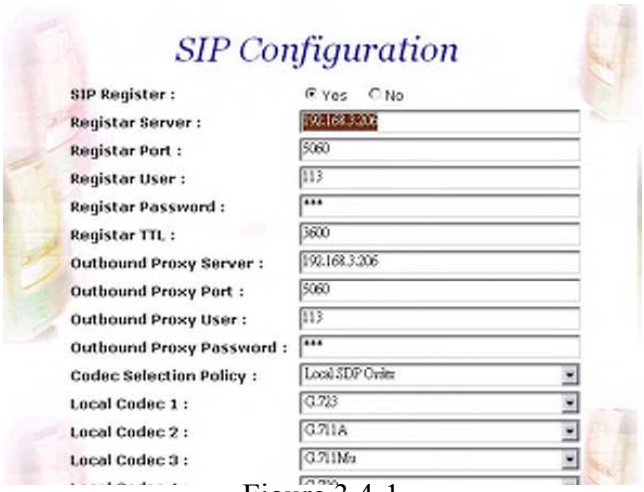
SIP Configuration
SIP Register : Yes No
Registar Server :
Registar Port : 5060
Registar User : 113
Registar Password : ***
Registar TTL : 3600
Outbound Proxy Server : 192.168.3.206
Outbound Proxy Port : 5060
Outbound Proxy User : 113
Outbound Proxy Password : ***
Codec Selection Policy : Local SDP Order
Local Codec 1 : G.723
Local Codec 2 : G.711A
Local Codec 3 : G.711Mu

Figure 3.4-1

Frequency used parameters:

- SIP Register: Yes
- Registar Server: 192.168.3.206
- Registar Port: 5060
- Registar User: 113
- Registar Password: 113
- Outbound Proxy Server: 192.168.3.206
- Outbound Proxy Port: 5060

- Outbound Proxy User: 113
- Outbound Password: 113

Step 3: You can see the screen display the new configuration of the **SIP Configuration** as figure 3.4-2.

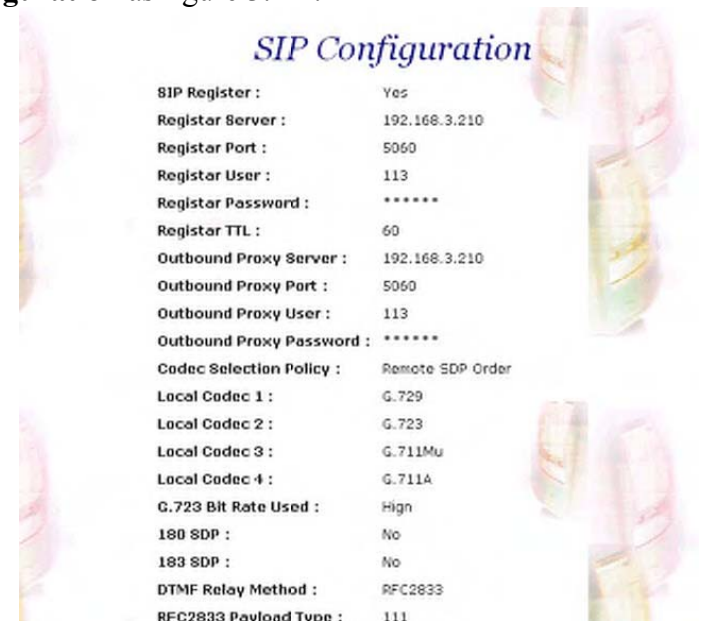
SIP Configuration
SIP Register : Yes
Registar Server : 192.168.3.210
Registar Port : 5060
Registar User : 113
Registar Password : ******
Registar TTL : 60
Outbound Proxy Server : 192.168.3.210
Outbound Proxy Port : 5060
Outbound Proxy User : 113
Outbound Proxy Password : ******
Codec Selection Policy : Remote SDP Order
Local Codec 1 : G.729
Local Codec 2 : G.723
Local Codec 3 : G.711Mu
Local Codec 4 : G.711A
G.723 Bit Rate Used : High
180 SDP : No
183 SDP : No
DTMF Relay Method : RFC2833

Figure 3.4-2

Digit Manipulation

The purpose of "Digit Manipulation" is to add or drop dialed digits for PSTN or IP side (Interface configuration for PSTN side & H.323 Configuration for IP side) at the selected interface in order to meet local PSTN dialing requirement. It can also be used in **Call Flow Edit** for flexible usage.

Step 1: We introduced the group and interface dependent digital manipulation to meet the customer's requires. Click **Digit Manipulation** to add a new Digit Manipulation Group, add as figure 3.5-1.

Figure 3.5-1

Step 2: Enter the related parameters and click **Apply** button as figure 3.5-2.

Figure 3.5-2

Field Description:

- Group ID: 0 (DM Group identify)
- Description: H.323: H323 In Drop
  SIP: SIP In Drop

Step 3: Click the New created DM and **Detail** button to add digits setting as figure 3.5-3.

Figure 3.5-3

Step 4: Click **New** button to add a new DM rule as figure 3.5-4.

Figure 3.5-4

Step 5: Create a new H.323 DM Group "1" and DM detail is show as follows:

Figure 3.5-5

H.323 Incoming Call DM Setting:

- Matched Pattern: 5 (pattern to be matched)
- Group ID: 1-H323 In Drop (belong to this DM group)
- Drop: 5 (drop digits)

H.323 incoming call
↓
Dialed number: 582265699
↓
Match the pattern 5
↓
Delete 5 (Drop)
↓
New dialed number becomes 82265699

Step 5: Also create a new SIP DM Group '2" and DM detail is show as follows:

Figure 3.5-6

SIP Incoming Call DM Setting:

- Matched Pattern: 113 (pattern to be matched)
- Group ID: 1-SIP In Drop (belong to this DM group)
- Drop: 113 (drop digits)

SIP incoming call

↓

Dialed number: 11307688222

↓

Match the pattern 11307

↓

Delete 113 (Drop)

↓

New dialed number becomes 07688222

Step 6: Create a PSTN incoming call DM Group "3" and DM detail is show as follows:

Figure 3.5-7

PSTN DM Setting:

- Matched Pattern: 0282265699 (pattern to be matched)
- Group ID: PSTN In Drop (belong to this group id)
- Drop: 0282265699 (drop digits)

PSTN incoming call (DNIS mode)

↓

Dialed number: 02822656991001

↓

Match the pattern 0282265699

↓

Delete 0282265699 (Drop)

↓

New dialed number becomes 1001

☻ ***Note: Digit Manipulation have to tapped for PSTN Side (Trunk→ Outbound/Inbound DM Group), VoIP Side (VoIP→Outbound/Inbound DM Group) or Call Flow (refer to section "Call Flow Editor") to take effect.***

Chapter 4 Call Flow Editor

Call Flow Editor is used to control the call behavior including voice prompt, AAA, DM…etc. It requires Java run time to run.

Step 1: Click Control→**Call Flow Editor** to create a Call Flow, click button to activate IVR Tool as figure 4-1

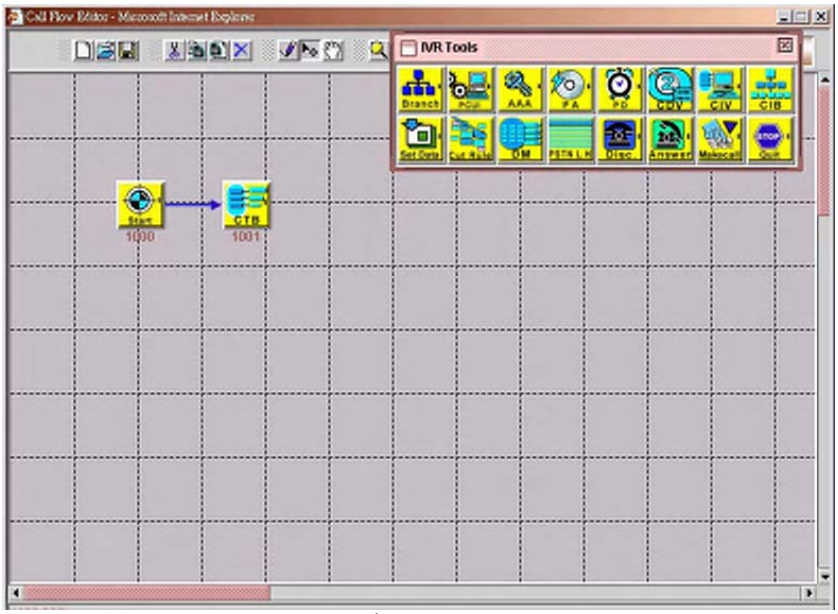

Figure 4-1

Component Description:

- New: Create a new call flow
- Load Call Flow: Load call flow from DW-E/H
- Save: Save a call flow in DW-E/H
- Cut: Cut a component
- Copy: Copy a component
- Paste: Paste a component
- Delete: Delete a component
- Line: Connecting 2 components together
- Select: Select the component at call flow workspace
- Scroll: Scroll the call flow workspace
- Zoom: Zoom in or zoom out the workspace
- View Grid: View or not
- Show Component Table: Show all component table

Step 2: Drag and prop the required component icon into the workspace as figure 4-2.

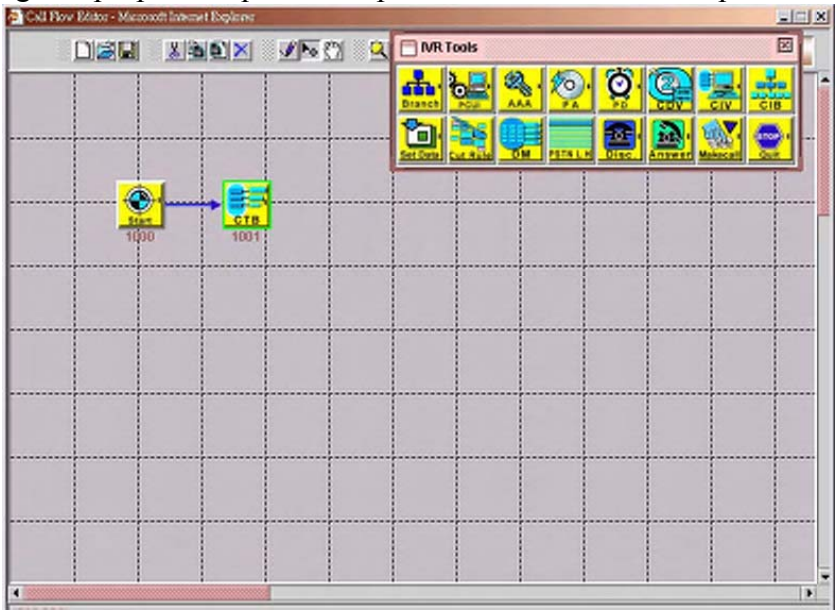

Figure 4-2

Right click the component to bring up the component propriety to setup parameter:

- AAA: Send Authorization for validation

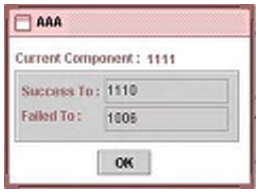

  - Success To: Success to component
  - Failed To: Failed to component

- Answer: Answer incoming call (PSTN only)

- Branch: Play an announcement and branch into different route

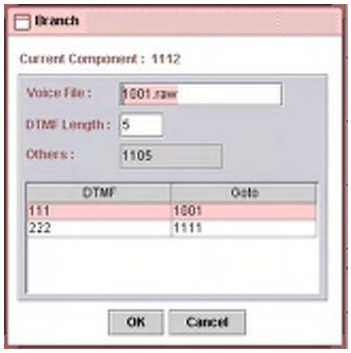

  - Voice File: Voice prompt file (“. raw” format) to be playing
  - DTMF Length: Number of DTMF to be receiving
  - Others: Default flow if not match

- DTMF: DTMF match pattern
- Goto: The next component if matched
- Line Propriety:
  -Branch Line: DTMF branch line setting

- CDV: Collected Digit Validation

- Check Parameter: Check parameter type (DNIS, ANI….)
- Digit From: Start digit from
- Digit To: End digit to
- Valid To: If the checked variable is success to validate
- Invaried To: If the checked variable is not success to validate

- CIB: Call Information Branch

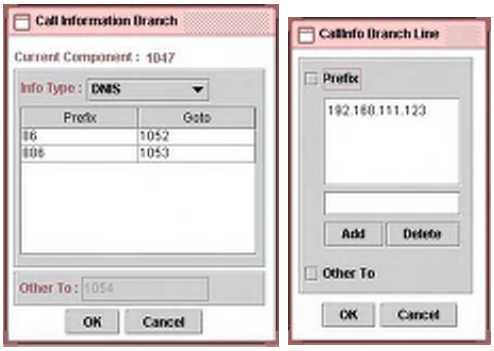

- Info Type: Information type selection
- Prefix: The prefix to be match
- Goto: The component to run next
- Call Info Branch Line: DTMF goto setting

- CIV: Call Information Validation, the user need setup the ACL for DNIS and IP TO take effect

  - Info Type: The infor type to be validation
    -DNIS: Called number
    -ANI: Calling number
    -IP: In coming IP address
    -User: User ID
  - Allow To: If it is met the ACL defined
  - Disallow To: If it is not met the ACL defined

- CTB: Call Type Branch

  - PSTN To: Route for PSTN call
  - H.323 To: Route for H.323 call
  - SIP To: Route for SIP call

- Cut Rule: Cut a system variable into different parts

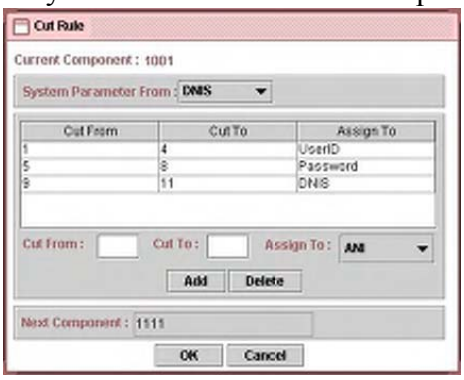

  - Cut From: Cut start digit from (start from 1)
  - Cut To: Cut end digit to
  - Assign To: Store the cutted result into

- Disconnect: Disconnect the call

- DM: Digit Manipulation

  - DM Parameter: Manipulation ANI or DNIS
  - DM Group ID: Apply to DM group

- MakeCall: Make Call to PSTN or H.323/SIP site

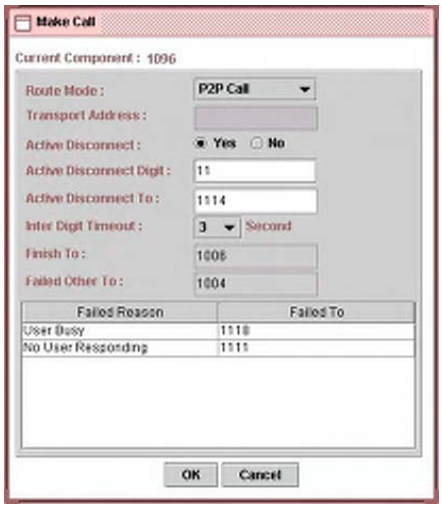

  - Route Mode: Gatekeeper Call or P2P Call or PSTN…etc. (for PSTN incoming call, please select the Gatekeeper, P2P Call, or SIP Proxy call TA; for H.323/SIP incoming call, please select the PSTN call)
  - Transport Address: When used for “H.323 TA” routing mode, the format used is “Ipaddr:port” (e.g. 192.168.111.50:1720)
  - Active Disconnect: Enable PSTN user can actively disconnect the call or not
  - Active Disconnect Digit: The DTMF digit to be tread as the disconnect trigger. Only can be used “Active Disconnect” enable
  - Active Disconnect To: The next component when active disconnect is occurred
  - Inter Digit Timeout: The max time to in seconds to wait between two digits.
  - Finish To: Successfully connect to remote site
  - Failed Other to: The next component when default failed call
  - Failed Reason: Failed reason selection
  - Failed To: When the failed reason occurred go to
  - **Line Propriety:**

-PSTN: PSTN disconnect reason code:

-Normal Call Clear

-User Busy
-No User Response
-No Answer
-Call Reject

- VoIP: VoIP disconnect reason code:
-User Busy
-No Answer
-Unreachable
-Other

- PA: Play Announcement

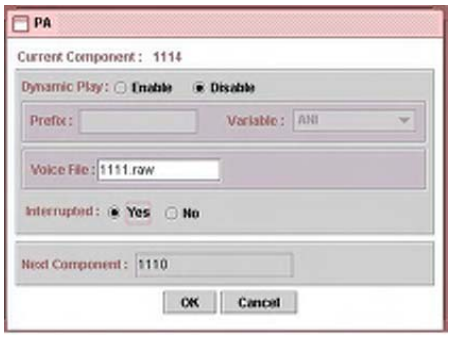

  - Dynamic Play: Dynamic play voice file by combine prefix and variable as the file name
  - Enable: Combine prefix to variable as the voice file to play
    -Prefix: Voice file prefix **(e.g. prefix: WT, variable: user1 (contact 201, played voice file is "WT201.raw")**
    -Variable: Variable to be appending as the voice file name
  - Disable: Use filter voice prompt file
    -Voice File: Voice prompt file
  - Interrupted: Voice can be interrupted or not

- PCUI: Prompt and Connect User Information

  - Play Type: Dial tone or voice prompt selection
  - Voice File: Voice prompt file
  - Max DTMF: Maxtor of DTMF to be received.
  - Assign To: Result (received DTMF) will be assign to
  - End of DTMF: The digit to indicate dial end.

- PD: Play Duration for prepaid purpose

  - Voice File: Leading voice prompt file
  - Language: Play duration language section
    -English
    -Chinese

☻ ***Note: The RADIUS servers need to be setup to send H.323/SIP credit time or internal RADIUS must be used.***

- PSTN L.H: PSTN Line Hunting

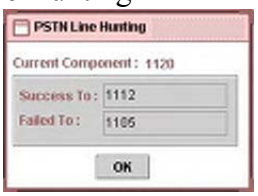

  - Success To: If fine an available channel by system setup (call hunting)
  - Failed To: If not fine an available channel by system setup (call hunting)

- Set Data: Assign value to a variable

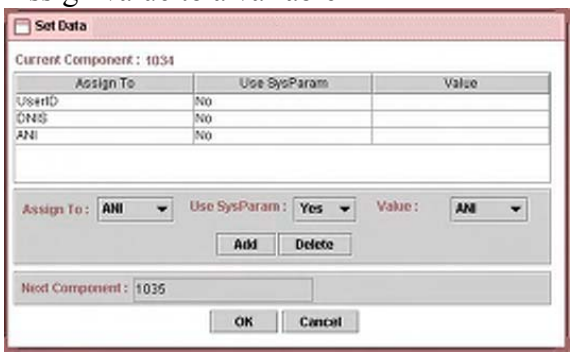

  - Assign To: Assigned variable
  - Use SysParam: Use system parameter to replace or not
  - Value: ANI, DNIS, User ID or other digits

- Start: Call flow start

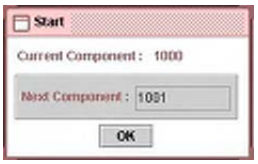

  - Next Component

- Quit: Disconnect calls

Example Call Flow as figure 4-3.

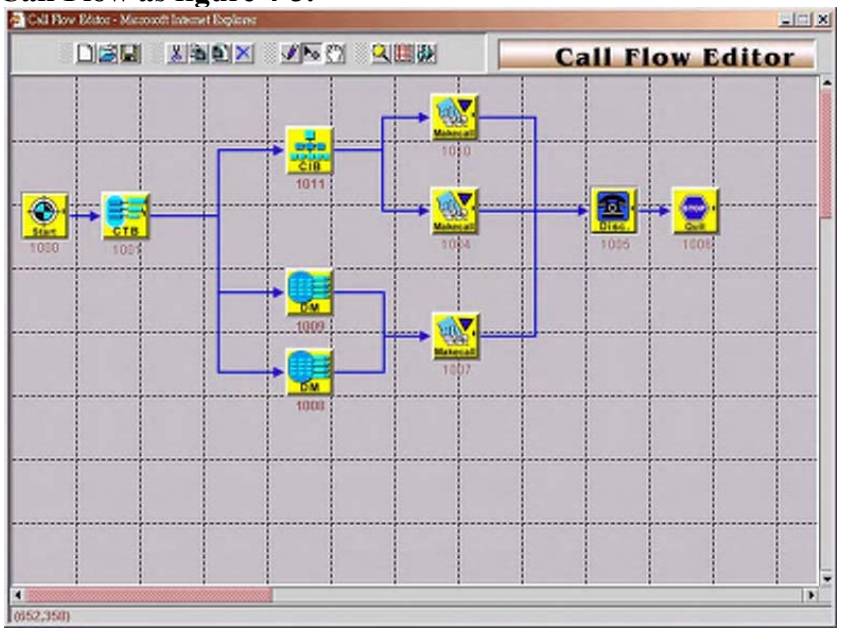

Example Description:

Components	Contents
Start Component ID: 1000	Next Component: 1001
CTB Component ID: 1001	PSTN To: 1011 H.323 To: 1009 SIP To: 1008
CIB Component ID: 1011	Info Type: ANI Prefix: 1 goto: 1010 (H.323 GK call) Prefix: 8 goto: 1004 (SIP Proxy call)
1011 Route for PSTN call	
MakeCall Component ID: 1010	Route Mode: **Gatekeeper** Finish To: 1005 Failed Other To: 1005
MakeCall Component ID: 1004	Route Mode: **SIP Proxy Call** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit	

Component: 1006	

1001 Route for H.323Gatekeeper call

DM Component ID: 1009	DM Parameter: DNIS DM Group ID: H.323 In Drop Next Component: 1007
MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component: 1006	

1001 Route for SIP Proxy call

DM **Component: 1008**	DM Parameter: DNIS DM Group ID: SIP In Drop Next Component: 1007
MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component: 1006	

Example Used Call Flow:

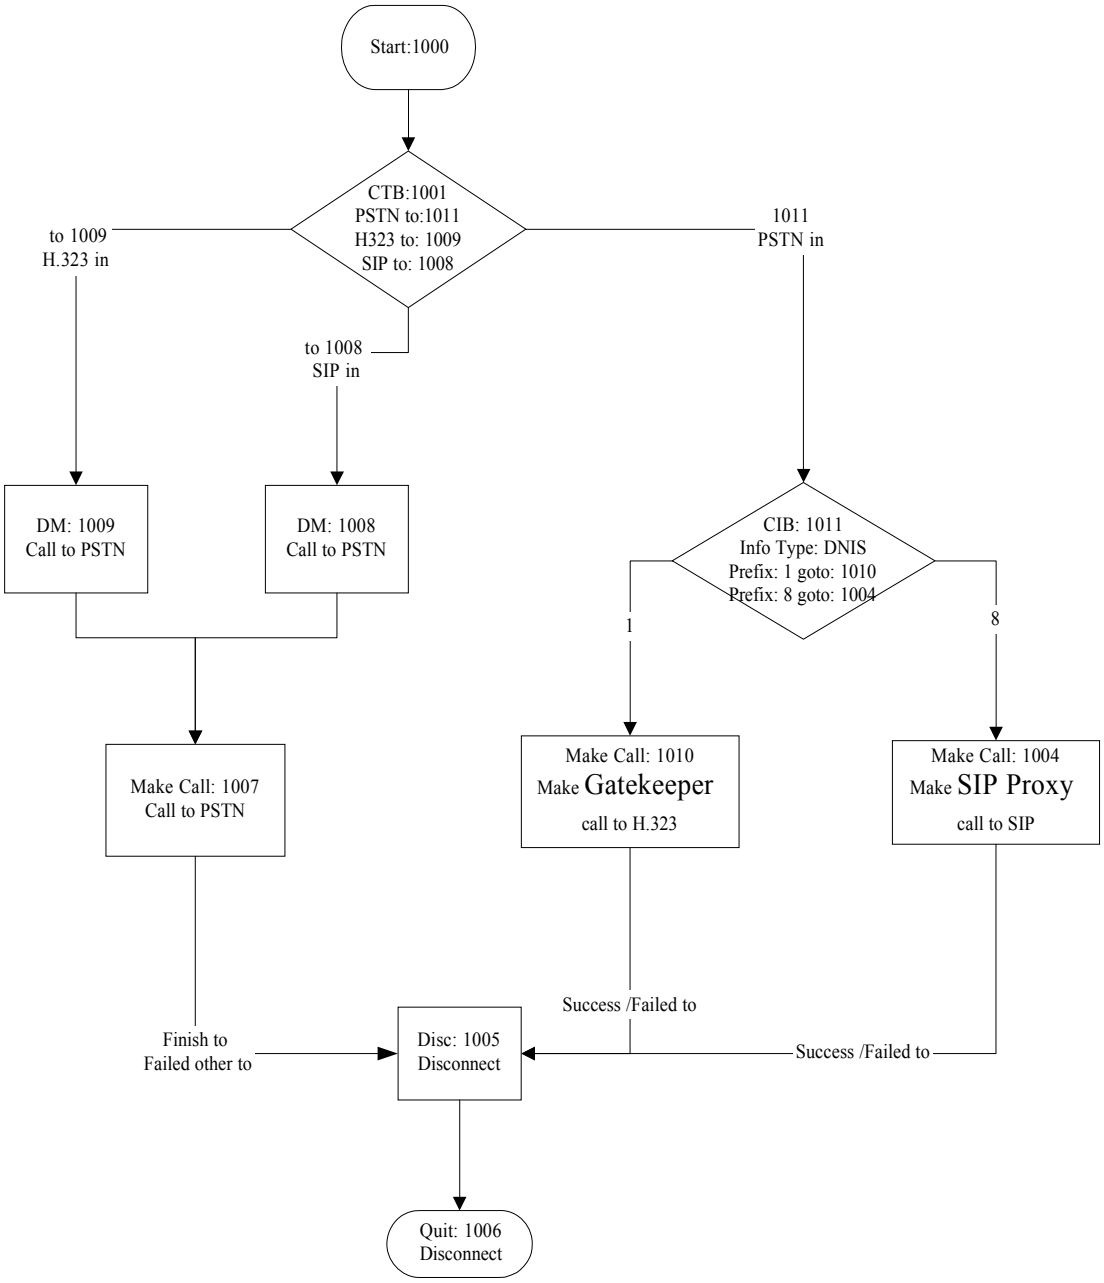

Configuration Manager

Configuration Management provides a way to save and reload the system configuration for future use.

Load a Configuration:

Step 1: When you need to load a saved configuration, click a saved configuration (i.e. 04/26/2004 Loading Test) item to load it back as figure 4.1-1.

Figure 3.7-1

Step 2: When screen shows *"**Current configuration will lost! Are you sure to load this configuration?"** click on OK button to load* he saved configuration to the working configuration as figure 4.1-1.

Figure 3.8-2

Note: It is need to restart the system to take effect of the new-loaded working configuration.

Save the working Configuration:

Step 3: To save the current configuration, select a new created configuration and click **Save** button, when screen shows ***"Description"***, please enter the configuration description (i.e. Billing Test) for the saved configuration as figure 4.2-2.

Figure 3.8-3

Step 4: You can see the screen display the changes as figure 4.2-4.

Figure 3.8-4

Backup the working configurations:

Step 5: To backup the running configuration, click on **Backup** button, to back up local hard disk. The whole running configuration will be compress into a zip file (file name: export.zip) and transfer back to local as figure 4.2-2.

Figure 3.8-5

Restore configuration:

Step 6: To restore the backup configuration file, click on **Restore** button, when screen shows ***"Import Configuration file"***, select backup file (i.e. c:\export.zip) click on **Import** button to restore the configuration to the working configuration as figure 4.2-2.

Figure 3.8-6

Compact the database file:

Step 7: In order to optimize the system performance, you can optional compact the database by click **Compact** button as figure 4.1-2.

Microsoft Internet Explorer
Before compact database file size is 1585152
After compact database file size is 1536000
Compact database successfully!!
OK

Figure 3.8-7

Note: Please make sure that there is no others person to use database concurrently.

Apply Change

When you load a new working configuration, the system must be restarted to take effect.

Step 1: Click **Configuration→Apply Change**, the screen show ***" The change you mode need to restart the system for apply please confirm to restart or do it later."*** Click on **OK/Cancel** to restart the system or not as figure 4.3-1.

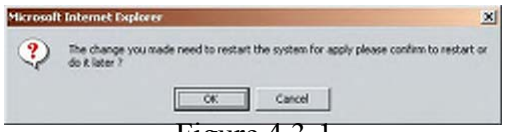
Microsoft Internet Explorer
The change you made need to restart the system for apply please confirm to restart or do it later ?
OK
Cancel

Figure 4.3-1

Chapter 5 Peer to Peer Mode Configuration

Environment used in this chapter

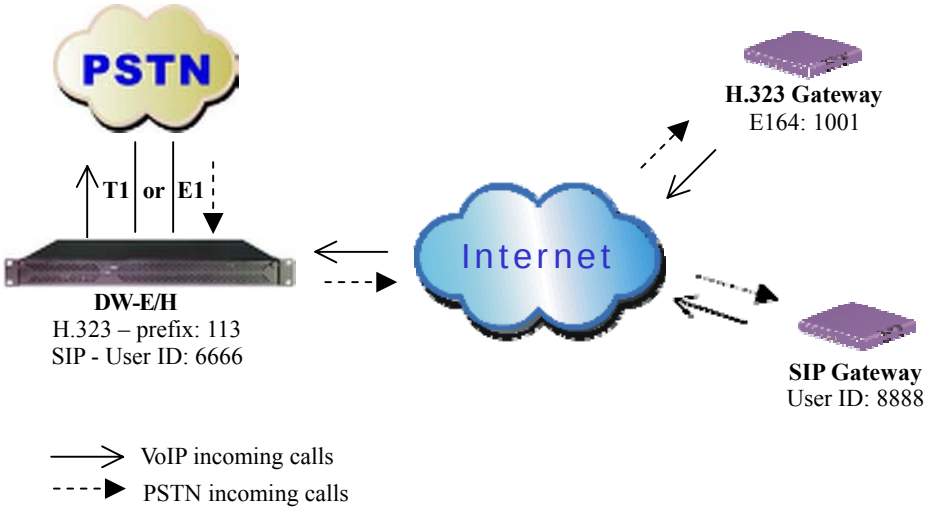

Peer to Peer Mode

Process:

PSTN → H.323 Call: DNIS (822656991001) → DM (PSTN In Drop) →Make H.323 - Peer to Peer Call (1001)

→ SIP Call: DNIS (822656998888) → DM (PSTN In Drop) →Make SIP - Peer to Peer Call (8888)

H.323 → DNIS (50932123321) → DM (H.323_in_drop) → Make Call (0932123321)

SIP → DNIS (1130028610825123) → DM (SIP_in_drop) → Make Call (0028610825123)

☺**Digit Manipulation: Please refer section "Digit Manipulation"**

Network Configuration

Please refer to section "Network Configuration"

Account Manager

Please refer to section "Account Manager"

Interface Configuration

Please refer to section "Interface Configuration"

H.323 Configuration

Step 1: Change **Register To Gatekeeper** to "**No**" to enable peer to peer mode as figure 5.1-1.

H.323 Configuration
Register To Gatekeeper : No
Gatekeeper IP :
Gatekeeper RAS :
E.164 Tel : 113
Register H.323 ID : WG113
Register Time To Live (sec) : 60
Response Timeout (Q.931) (sec) : 60
Connect Timeout (Q.931) (sec) : 60
DTMF Relay : H.245 - Alphanumeric
Fax Transport : T.38 Fax Relay (H.245 Mode)
Fast Connect Mode : Enable Fast Start Both Site
H.245 Tunneling : Disable
H.450 Service : Disable H450
Codec Priority 1 : G.723 High

Figure 5.1-1

Frequency used parameters:

- Register to Gatekeeper: No

SIP Configuration

Step 1: Change **SIP Register** to "**No**" to enable peer to peer mode as figure 5.2-1.

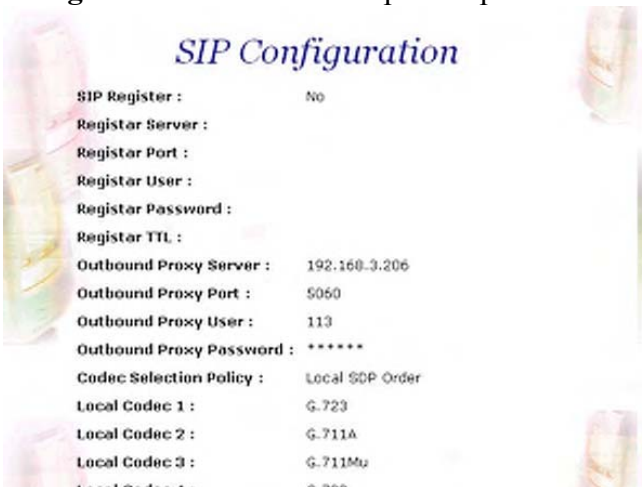
SIP Configuration
SIP Register : No
Registar Server :
Registar Port :
Registar User :
Registar Password :
Registar TTL :
Outbound Proxy Server : 192.168.3.206
Outbound Proxy Port : 5060
Outbound Proxy User : 113
Outbound Proxy Password : ******
Codec Selection Policy : Local SDP Order
Local Codec 1 : G.723
Local Codec 2 : G.711A
Local Codec 3 : G.711Mu

Figure 5.2-1

Frequency used parameters:

- SIP Register: No

Address Book

For making a **Peer-to-Peer** call, the IP device must has an address record in the phone book for routing.

Step 1: Click **Address Book** adds a new address book for the peer to peer calls, New to add as figure 5.3-1.

Figure 5.3-1

Step 2: Enter the related parameters and click **Apply** button as figure 5.3-2.

Figure 5.3-2

Field Description:

- Name: H.323-LanPhone or SIP-Cisco
- Tel/Prefix: 1002
- Trans Address:
  - H.323 Call: 192.168.5.102 or 192.168.5.102:1720
  - SIP Call: sip:8001@192.168.5.61 or sip:8001@192.168.5.61:5060 or sip:8001@ctivnet.net

Step 3: You can see the screen displays the new Address Book as figure 5.3-3.

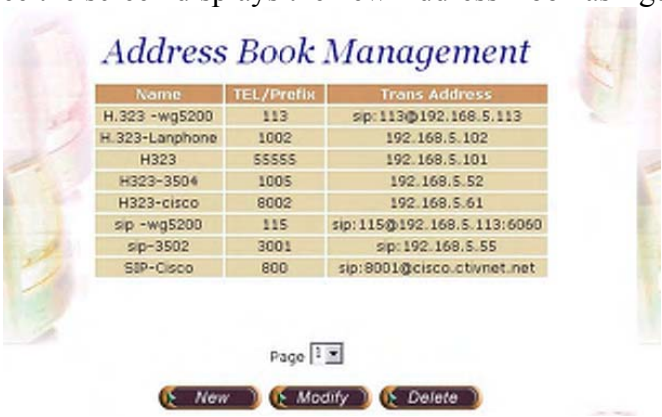

Figure 5.3-3

☻ ***Note: You must apply the change to take effect for the change.***

Digit Manipulation

Please refer to section "Digit Manipulation"

Call Flow Editor

Please refer to section "Call Flow Editor"

Call Flow (P2P Mode):

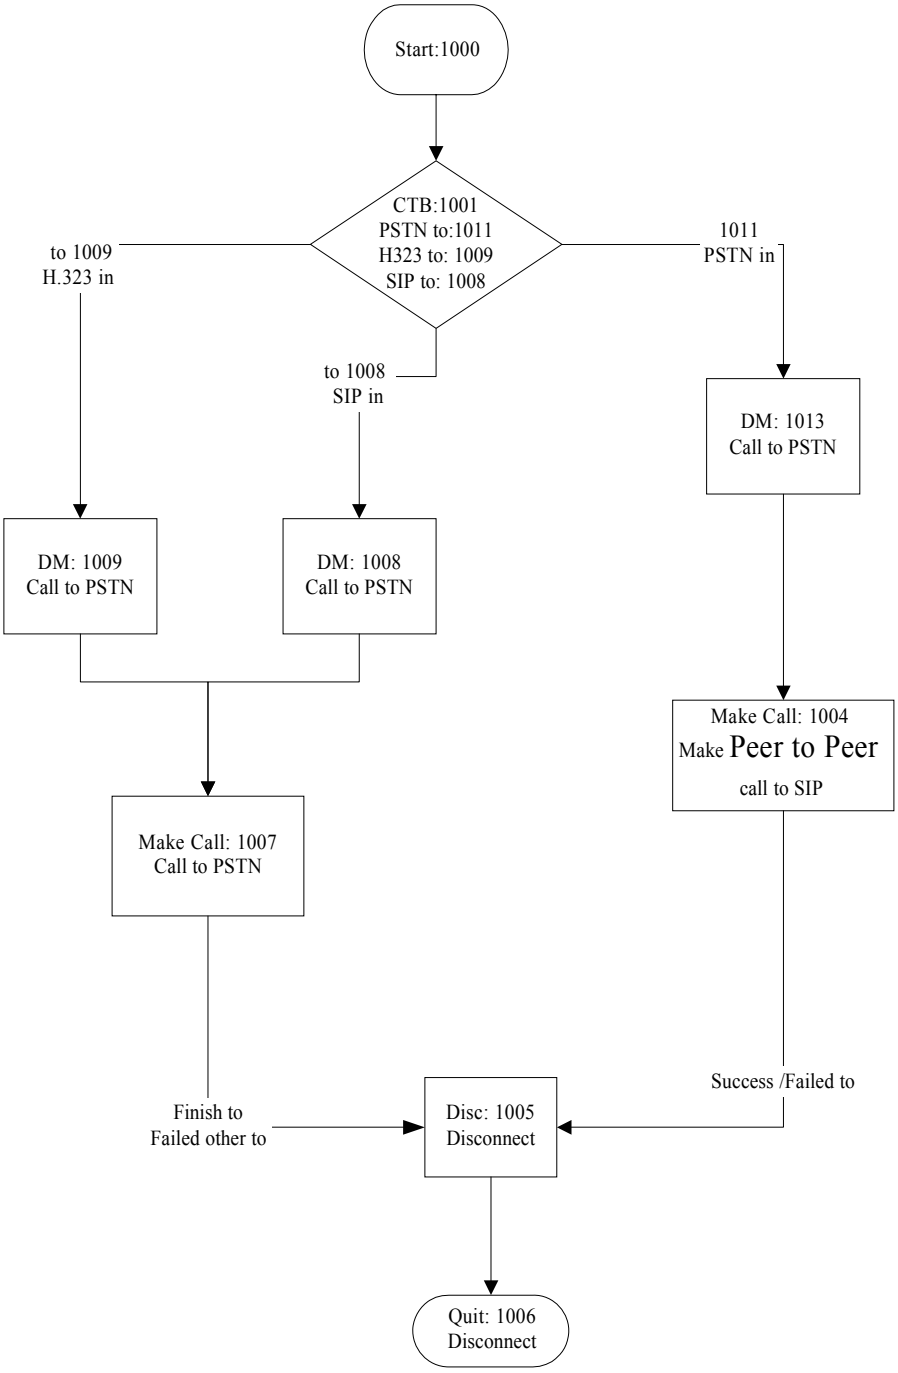

Configuration Manager

Please refer to section "Configuration Manger"

Apply Change

Please refer to section "Apply Change"

Chapter 6 Advance Configuration Reference

Configuration

System Configuration

Start Path: Configuration→System

Figure 6.1-1

Parameter Description:

- CDR Mode: Call detail record generating mode (Refer to "**Appendix 3 Retrieve CDR Information**" for detail file description)
  - File Only: Log CDR into the file only. It can be retrieved by ftp (directory c:\cd cdr).
  - Radius Start/Stop: Log CDR into the file and send RADIUS start/stop billing message out.
    - VoIP: enable VoIP site RADIUS billing message or not.
    - PSTN: enable PSTN site RADIUS billing message or not.
  - Radius Stop: Log CDR into the file and send RADIUS stop billing message out.
    - VoIP: enable VoIP site RADIUS billing message or not.
    - PSTN: enable PSTN site RADIUS billing message or not.

- CDR Keepdays: CDR system keeping days
- Hot Swappable: Hot swappable support (reserved)
- First Digit Timeout: The max to time (in second) waits for receiving the first digit entered (5~20 sec).
- Inter Digit Timeout: The max to time (in second) waits for the between two digits (5~20 sec).
- Debug Level:
  - Critical: Show critical error messages only
  - Warring: Show warring and critical error message only
  - Information: Show information, warring and critical message only
  - Debug: Show all debug messages
  - Full Trace: Show all status and debug messages

☻ ***Note: Please set to "Critical" only, or the whole system performance will be hitted.***

- Time Expired Notify: Seconds to be notifying caller before communication expired. This function is used for Pre-Paid calling card service and must cooperate with RADIUS Server.
- Almost Expired Tone: Communication expired notice tone selection
  - Notify Tone#1:
  - Notify Tone#2:
- Authentication Mode: Authentication by DW-E/H or RADIUS
  - Internal: Authentication building User ACL
  - External: Authentication by RADIUS
  - Ext. AAA Failure Opt: Bypass or disconnect incoming calls when external
- Version: 4.1

Interface Configuration

Start Path: Configuration→Interface

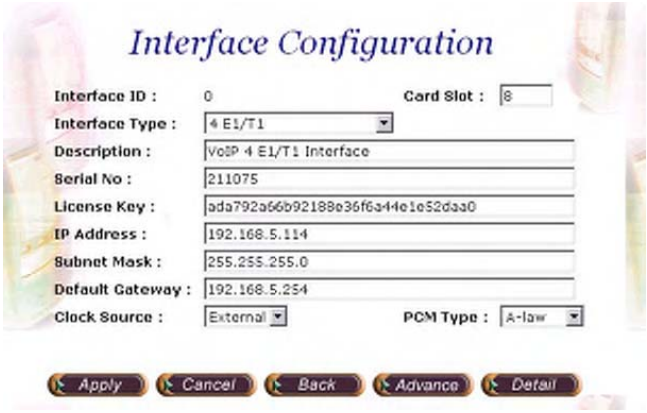

Figure 6.2-1

Basic Parameter Description:

- Interface ID: System parameter
- Card slot: System parameter
- Interface Type: System parameter
- Description: System parameter
- Serial No: System parameter
- License Key: System parameter
- IP Address: IP address used for voice RTP stream
- Subnet Mask: Submask (doesn't support super class)
- Default Gateway: Default gateway for routing
- Clock Source: PSTN clock source for TDM sync
  - Internal: derived from internal oscillator
  - External: derived from external PSTN E1/T1 clock
- PCM Type: PCM type encoding, E1 A-law; T1 u-law

Advance Interface Configuration:
Start Path: Configuration→Interface →Advance

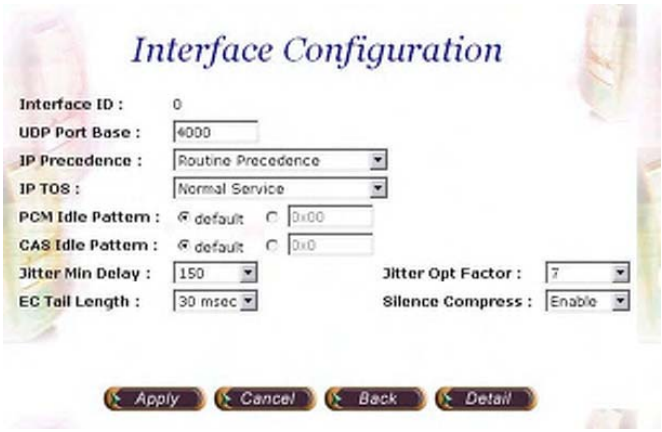

Figure 6.2-2

Advance Parameter Description:

- Interface ID: System parameter
- UDP Port Base: UDP port used for RTP stream, each channel needs 3 RTP ports and must be started by a multiple of 10
- IP Precedence: Voice package priority setting
  - Routine Precedence
  - Priority Precedence
  - Immediate Precedence
  - Flash Precedence
  - Flash Override Precedence
  - Critical Precedence
  - Internetwork Precedence
  - Network Precedence
- IP TOS: Top of Service with the following priority selection
  - Normal Service
  - Minimize Monetary
  - Maximize Reliability
  - Maximize Thought
  - Minimize Delay
- PCM Idle Pattern: This pattern will be sending on each B channel PCM time slot when the channel is idle (not connected). The default value for A-Law is 0xff and for Mu-Law is 0x55. You only change it when SWITCH need.
- CAS Idle Pattern: When channel is idle, ABCD (CAS) pattern to be applied CAS signaling bus
- Jitter Min Delay: The minimum delay time of Jitter buffer. The range is 0 to 150ms. Default value is 150ms. Which has better voice quality but the delay time will be long.
- Jitter Opt Factor: Jitter buffer optimization factor from 0 to 12. The default value is 7. Set to 0 will have lowest voice delay but have bad voice quality. Set to 12 will have long voice delay but with better voice quality
- EC Tail Length: Echo Cancellation Length, default value is 25ms
- Silence Compress: Enable silence compress or not

T1/E1 Trunk Configuration

Start Path: Configuration→Interface→Trunk

Figure 6.3-1

Basic Parameter Description:

- Interface ID: System parameter
- Trunk ID: System parameter
- Trunk Type: T1or E1 selection
- Description: Description for this trunk ID
- Termin Side: Network site or User Site (normally, you set to "**user site**" when connect to switch)
  - User Side
  - Network Side
- Trunk Mode: Trunk operation mode
  - Disable: Disable the trunk
  - Normal: Accept PSTN and VoIP calls
  - PSTN incoming only: Allow the PSTN incoming calls only
  - H.323 incoming only: Allow the H.323 incoming calls only
- Hunting Method: PSTN trunk hunting method for available channel
  - Random: Hunt randomly
  - Cyclic: Initial hunt (after power-up/reboot) begins with B channel 1; subsequent hunts begin with position following last successfully allocated resource
  - Rotary: Hunt always begins with B channel 1
- CAS Variance: CAS counting variance
- Framing Method:
  - **For T1**
    - super frame
    - 4-frame multi-frame
    - 12 frame multi-frame (D4)
    - extend super frame without CRC6
    - extend super frame with CRC6
    - 72-Frame Multi-Frame
  - **For E1:**
    - Automatic CRC4 or Double Frame selection
    - Double Frame Format

- CRC4 multi-frame
- CRC4 extend multi-frame

- Protocol Tag: supported protocol on T1/E1 interface with PSTN switch
  - **For T1:**
    - T1 CAS
    - T1 NI2 ISDN
    - T1 4ESS ISDN
    - 5ESS 9 ISDN
    - 5ESS 10 ISDN
    - T1 DMS100 ISDN
    - T1 NTT ISDN used to connect NTT INS-1500 ISDN standard (Japan Only)
  - **For E1:**
    - E1 EURO ISDN: used for most of European ISDN standard
    - E1 MFCR2
    - E1 CAS R2
    - E1 AUSTEL ISDN: Australia E1 ISDN Variance
    - E1 HKT ISDN: Hong E1 ISDN Kong Variance
    - E1 KOR ISDN: Korea E1 ISDN Variance
- Line Code: T1: you can choose AMI, B8ZS; E1: you can choose AMI, HDB3
- PSTN Trace: PSTN layer debug trace. It will generate a debug trace file for tracing purpose. Only enables it under Dynamix technical supports instruction and disable it when complete the debug
- Inbound DM Group: Digit Manipulation group used for incoming calls associated to this trunk
- Outbound DM Group: Digit Manipulation group used for outgoing calls
- Local Ring Back: Provide ring back tone for PSTN or not. It only works when VoIP outgoing Fast Start is disabled.

Advance Trunk Configuration:
Start Path: Configuration→Interface →Trunk →Advance

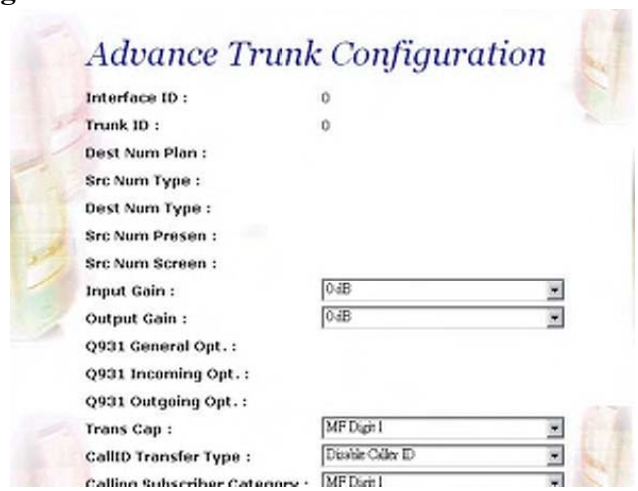

Figure 6.3-2

Advance Parameter Description:

- Interface ID: System parameter
- Trunk ID: System parameter

- Dest Num Plan: ISDN destination number plan
- Src Num Type: ISDN source number type
- Dest Num Type: ISDN destination number type
- Src Num Presen: ISDN source number presentation
- Src Num Screen: ISDN source number display
- Input Gain: Voice Gain from IP to PSTN side (default: 0 db)
- Output Gain: Voice Gain from PSTN to IP side (default: 0 db)
- Q.931 General Opt.: used for Q.931 general behavior.
  - 0x0001: No Status message send for unknown facility IE if it is set
  - 0x0002: No Status message send for invalid content of a valid facility IE if it is set
  - 0x0080: Send Connect Ack message when receive Connect message if it is set, you can OR the required option together
- Q.931 Incoming Opt.: used for Q.931 incoming call behavior
  - 0x0800: include Channel-ID IE in the first reply message (e.g. Call Proceeding or Alerting)
  - 0x2000: enable the system to include Channel-ID IE in the Call Proceeding message, you can OR the required option together
- Q.931 Outgoing Opt.: used for Q.931 outgoing behavior
  - 0x0010: use Mu-law if this bit is set, or A-law will be used. Apply only for Korea variance, you can OR the required option together
- Trans Cap: Transfer Capability
  - Voice Service
  - Data Service
  - Modem Service
- CallID Transfer Type: Call ID transfer type
  - Disable Caller ID: default parameter
  - Transparent Caller ID
  - Relay Caller ID
  - Bypass Caller ID

Dial Plan Configuration

Dial Plan can be used to assign the ISDN number plan based on prefix setting.

Start Path: Configuration→Interface→Dial Plan

Figure 6.3-1

Basic Parameter Description:

- Prefix: Called party number prefix
- Dest Num Plan: ISDN destination number plan
- Dest Num Type: ISDN destination number type
- ApplyTo: Trunks apply to

H.323 Configuration

Start Path: Configuration→H.323

Figure 6.3-1

Basic Parameter Description:

- Register To Gatekeeper: Register to Gatekeeper or not

  - Yes: Register to GK
  - No: Not register to GK
- Gatekeeper IP: Gatekeeper IP Address
- Gatekeeper RAS: UDP Port number listened on Gatekeeper (default: 1719)
- E.164 Tel: Telephone number to be registered to Gatekeeper
- Register H.323 ID: H.323 alias name to be registered to Gatekeeper
- Register Time To Live (sec): The registration maximum time to live setting when registered to the Gatekeeper
- Response Timeout (Q.931)(sec): The maximum time to wait for response from sending call setup signal out
- Connect Timeout (Q.931)(sec): The maximum time to wait for connection (answer) from dialing out the destination number
- DTMF Relay: DTMF transfer type selection
  - RTP relay (RFC 2833): DTMF relay via RTP packet (RFC2833 standard)
  - DTMF transparent: transmitter DTMF over voice channel
  - H.245 Signal input: DTMF relay via H.245 user signal input
  - H.245 Alphanumeric: DTMF relay via H.245 Alphanumeric signal
  - Q.931 User Information: DTMF relay via Q.931 User to user information
- Fax Transport: Fax transport type selection
  - Transparent mode: Transparent mode (by voice packet)
  - T.38 Fax Relay (H.245 mode): T.38 Fax relay (H.323 Annex D)
  - T.38 Fax Relay (Propriety mode): T.38 Fax Relay (propriety mode)
  - FRF11 Fax Relay (Propriety mode): FRF11 Fax Relay (propriety mode)
- Fast Connect Mode: Connection of H.323 call fast mode
  - Disable: Don't use Fast Start.
  - Enable Fast Start Both Site: Use Fast Start for incoming call and outgoing H.323 calls
  - Fast Start-H.323 incoming only: Enable Fast Start for H.323 incoming calls only
  - Fast Start-H.323 outgoing only: Enable Fast Start for H.323 outgoing calls only.
  - Early H.245: Use Early H.245
- H.245 Tunneling: Transfer the H.245 message over the Q.931 channel
- H.450 Service: Enable the H.450 calls transfer service
- FS Enable 1-6 (Codec Priority 1-6): Enable Fast Start codec selection for each codec
- Inbound DM Group: Digit Manipulation Group for H.323 incoming calls
- Outbound DM Group: Digit Manipulation Group for H.323 outgoing calls

Advance H.323 Configuration:
Start Path: Configuration→H.323 →Advance

Figure 6.3-2

Advance Parameter Description:

- RAS Multicast IP: RAS multicast IP for Gatekeeper searching
- RAS Multicast Port: RAS multicast Port for Gatekeeper searching
- Max Call: The maximum H.323 calls
- Max Channel: The maximum channel of each H.323 call
- RAS Port: Local RAS port (default: 1719)
- Q.931 Port: Local TCP port number of Q.931
- T.38 ECM Mode: T.38 Error Correction Mode
  - T.38 ECM Interoperable mode
  - T.38 ECM Backward Compatible Mode
- FAX Rdepth: T.38 relay redundancy packet depth for high-speed mode.
- H.245 Option: Separate the H.245 channel in the call of the Fast Start mode or not.
- G.723 Psize: G.723 transmission packet size in ms (default: 30ms)
- G.729 Psize: G.729 transmission packet size in ms (default: 20ms)
- G.711 Psize: G.711 transmission packet size in ms (default: 20ms)

SIP Configuration

Start Path: Configuration→SIP

SIP Configuration
SIP Register : Yes
Registar Server : 192.168.3.210
Registar Port : 5060
Registar User : 113
Registar Password : ******
Registar TTL : 60
Outbound Proxy Server : 192.168.3.210
Outbound Proxy Port : 5060
Outbound Proxy User : 113
Outbound Proxy Password : ******
Codec Selection Policy : Remote SDP Order
Local Codec 1 : G.729
Local Codec 2 : G.723
Local Codec 3 : G.711Mu
Local Codec 4 : G.711A
G.723 Bit Rate Used : High
180 SDP : No
183 SDP : No
DTMF Relay Method : RFC2833
RFC2833 Payload Type : 111

Figure 6.4-1

Basic Parameter Description:

- SIP Register: Register to SIP proxy server or not
  - Yes: Register to proxy server
  - No: Not register to proxy server
- Registar Server: SIP registar proxy server IP Address
- Registar Port: SIP registar proxy server port number (default: 1719)
- Registar User: SIP registar proxy server User ID
- Registar Password: SIP registar proxy server User Password
- Registar TTL: The registration maximum time to live setting when registered to the SIP proxy server
- Outbound Proxy Server: The IP address of an outbound Proxy the SIP Stack uses.
- Outbound Proxy Port: The port of an outbound Proxy the SIP Stack uses
- Outbound Proxy User: The User ID of an outbound Proxy the SIP Stack uses.
- Outbound Proxy Password: The password of an outbound Proxy the SIP Stack uses.
- Codec Seclection Pollicy: Selection order to match the remote SDP for codec selection.
  - Local SDP Order: Use local SDP order to match codec
  - Remote SDP Order: Use Remote SDP order to match codec
- Local Codec 1~4: Codec selection priority (1 to 4) (1: highest, 4: lowest)
- G.723 Bit Rate Used: G.723.1 high bits rate (6.3k) or low bit rate (5.3k) is used
- 180 SDP: Set SDP for 180 ring message
- 183 SDP: Set SDP for 183 call progress indication.
- DTMF Relay Method: DTMF transport type selection
  - Transparent: transmit DTMF over audio channel
  - SIP INFO: Use SIP INFO Message to relay DTMF

- RFC2833: Use RFC2833 for DTMF over RTP packet
  - RFC2800 Payload Type: RTP payload type used for RFC2833 DTMF relay
- Fax Transmission: Fax transport type selection
  - T.38 Fax Relay: T.38 fax relay
  - Transport: Transparent mode (by voice packet)
- Accept Proxy Call Only:
  - Yes: Only call from outbound proxy server is allowed
  - NO: Accept any SIP calls
- Inbound DM Group: Digit Manipulation Group for SIP incoming calls
- Outbound DM Group: Digit Manipulation Group for SIP outgoing calls

Advance SIP Configuration:
Start Path: Configuration→SIP →Advance

Advance SIP Configuration
TCP Enable : Yes
Max TCP Connection : 300
Outbound Use TCP : Yes
Register Use TCP : No
TCP Port : 6060
UDP Port : 5060
Reliable Provision (100rel) :
Max Call Leg : 256
Max Transaction : 300
Max Register Client : 2
Send Receive Buffer Size : 2048
Reject Unsupported Extension : Yes
Message Pool Page Size : 1024
General Pool Page Size : 1024
Application Pool Page Size : 1024
Retransmission T1 : 2000
Figure 6.4-2

Advance Parameter Description:

- TCP Enable: Receive SIP TCP call or not.
- Max TCP Connection: Max Call: The maximum SIP TCP calls.
- Outbound Use TCP: Use SIP TCP for outbound call or not. If it set to no, UDP is used.
- Register Use TCP: Use SIP/TCP to register to SIP registratar.
- TCP Port: The local TCP port on which the SIP Stack listens.
- UDP Port: The local UDP port on which the SIP Stack listens.
- Reliable Provision: Support PRACK or not (100rel)
- Max Call Leg: The maximum number of call-legs the SIP Stack allocates. You should set this value to the maximum number of call your expect the SIP Stack to handle simultaneously.
- Max Transaction: The maximum number of transactions the SIP Stack allocates. You should set this value to the maximum number of call your expect the SIP Stack to handle simultaneously.
- Max Register Client: The maximum number of Register-Clients the SIP Stack allocates. You should set this value to the maximum number of call your expect the SIP Stack to handle simultaneously.

- Send Receive Buffer Size: The buffer size used by SIP Stack for receiving and sending SIP messages.
- Reject Unsupported Extension: Yes or No
- Message Pool Page Size: Used to hold and process all incoming and outgoing message in the from of encoded messages or message objects. It is recommended that you configure the page size to the average message size your system is expected to message.
- General Pool Page Size: Used by SIP Stack objects, such as call-legs and transaction, to store the internal fields. For example, the call-legs object will store the To, From and Call-ID headers and the local and the remote contact addresses on the general pool pages. The general pool is also used from other activities that demand memory allocation.
- Application Pool Page Size: The size of page in the application pool
- Retransmission T1: T1 determines several timer as defined in RFC3261. For example, When an unreliable transport protocol is used, a Client Invite transaction retransmits requests at an interval that start at T1 seconds and doubles after every retransmission. A Client General transaction retransmits requests at an interval that starts at T1 and doubles until it reaches T2. (Default Value: 500)
- Retransmission T2: Determines the maximum retransmission interval as defined in RFC3261. For example, when an unreliable transport protocol is used, general requests are retransmitted at an interval which starts at T1 and doubles until reaches T2. If a provisional response is received, retransmission continue but at an interval of T2. (Default Value: 4000)
- Retransmission T4: T4 represents the amount of time the network takes to clear message between client and server transactions as defined in RFC3261. For example, when working with an unreliable transport protocol, T4 determines the time that UAS waits after receiving an ACK message and before terminating the transaction. (Default Value: 5000)
- Invite Linger Timer: After sending an ACK for an INVITE final response, a client cannot be sure that the server has received the ACK message; the client should be able to retransmit the ACK upon receiving retransmissions of the final response for inviteLingerTimer milliseconds.
- General Linger Timer: After a server sends a final response, the server cannot be sure that the client has received the response message. The server should be able to retransmit the response upon receiving retransmissions of the request for generalLingerTimer milliseconds. (Default Value: 32000)
- Provisional Timer: When a client receives a provisional response, it continues to retransmit the request, but with an interval of provisionalTimer milliseconds.
- Cancel General No Response Timer: When sending a CANCEL request on a General transaction, the User Agent waits cancelGeneralNoResponseTimer milliseconds before timeout termination if there is no response for the cancelled transaction.
- Cancel Invite No Response Timer: When sending a CANCEL request on a Invite transaction, the User Agent waits cancelInviteNoResponseTimer milliseconds before timeout termination if there is no response for the cancelled transaction.
- General Request Timeout Timer: After sending a General request, the User Agent waits for a final response generalRequestTimeoutTimer milliseconds

before timeout termination (in this time the User Agent retransmits the request every T1, 2*T1,…T2,…milliseconds)

- 183 to Alerting: When receive a SIP 183 message from remote site, send Alerting in stead of Call Progress Indicator
- AutoSend 183: DW-E/H always send Call Progress Indicator (SIP 183) to VoIP party. It can be used for CAS protocol to enable early media.
- Behind NAT: Does DW-E/H is located behind NAT or not
- Public Signal IP: The static mapped IP for SIP signal
- Public Signal Port: The static mapped Port for RTP stream
- Public RTP IP: The static mapped RTP IP
- Public RTP Port: The static mapped RTP starting port
- Public RTP Port Interval: The DW-E/H has at least 30 RTP channels. Each channel needs 3 ports mapping on NAT Server. The interval is used to caculate the right port for each channel.
- Overload Redirect: SIP overload redirect when DW-E/H is not able for service the call
- Redirect Host: Redirect host URI (format: user@siphost, siphost)
- Redirect Port: Redirect port number
- Send 487 When Recv CANCEL: When receive CANCEL form remote site, send “487 Request canceled” or not
- Caller ID Mode:
  - Local: use DW-E/H proxy user id
  - Caller: use SIP calling party ANI

Behind NAT Example 1:

	DW-E/H	NAT Server Setting
One-by-One Static IP Mapping	192.168.111.112	210.59.163.11
Static Port Mapping	192.168.111.111:5060	210.59.163.10:10000

DW-E/H NAT Enable Setting:
Public Signal IP: 210.59.163.10
Public Signal Port: 10000
Public RTP IP: 210.59.163.11
Public RTP base port: 4000 (same as "**Interface→Advance's Config**")
Public RTP Port Interval: 10

Behind NAT Example 2:

	DW-E/H	NAT Server Setting
Static Port Mapping	192.168.111.111:5060	210.59.163.10:5060
RTP Channel 01	192.168.111.112:4000	210.59.163.10:10000
	4001	10001
	4002	10002
RTP Channel 02	192.168.111.112:4010	210.59.163.10:10003
	4011	10004
	4012	10005
.	.	.
.	.	.
.	.	.
RTP Channel 30	192.168.111.112:4310	210.59.163.10:10357
	4311	10358
	4312	10359

DW-E/H NAT Enable Setting:
Public Signal IP: 210.59.163.10
Public Signal Port: 5060
Public RTP IP: 210.59.163.10
Public RTP base port: 10000 (same as "**Interface→Advance's Config**")
Public RTP Port Interval: 0

Access Control

Access Control list can be used to filter the calls forms the IP Network, DNIS, and ANI. ***It must be used in call flow edit to take effect.***

IP ACL

Start Path: Configuration→Access Control→IP ACL

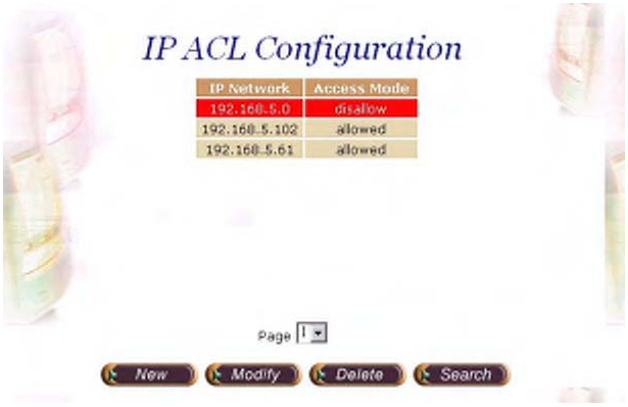

Figure 6.5-1

Parameters:

- IP Network: IP Address or prefix used to be filtered
- Access Mode:
  - Allow: the inputs IP Network are allowed for calls.
  - Disallow: The inputs IP Network are disallowed for calls.

☻ **Note: If in the system has both allowance and disallowance setup, the system will check allowance first and disallowance later. If only disallowance inputted all IP will allow to work except disallowed network. If only allowance inputted, only those IP from allowance list will work.**

ANI ACL

ANI ACL
Start Path: Configuration→Access Control→ANI ACL

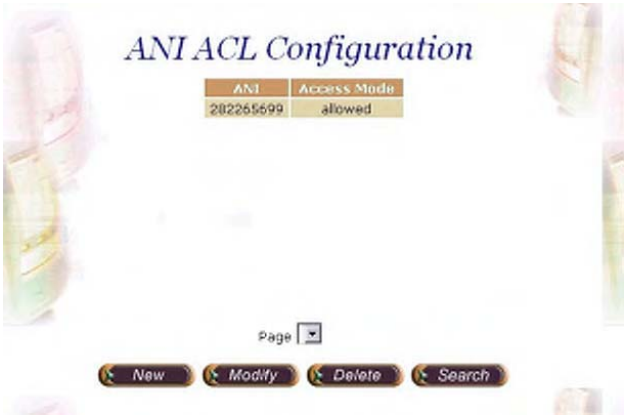

Figure 6.5-2

Parameters:

- ANI: Calling party number used to filter
- Access Mode:
  - Allow: the calling numbers are allowed for calls
  - Disallow: The calling numbers are disallowed for calls

☻ ***Note: If in the system has both allowance and disallowance setup, the system will check allowance first and disallowance later. If only disallowance inputted all ANI will allow to work except disallowed ANI. If only allowance inputted, only those ANI from allowance list will work.***

DNIS ACL

Start Path: **Configuration→Access Control→DNIS ACL**

Figure 6.5-3

Parameters:

- DNIS: Called party number used for filter
- Access Mode:
  - Allow: The called numbers are allowed for calls
  - Disallow: The called numbers are disallowed for calls

☻ ***Note: If in the system has both allowance and disallowance setup, the system will check allowance first and disallowance later. If only disallowance inputted all DNIS will allow to work except disallowed DNIS. If only allowance inputted, only those DNIS from allowance list will work.***

User ACL

User ACL is used to store subscriber information when internal AAA is enabled.

Start Path: **Configuration→Access Control→User ACL**

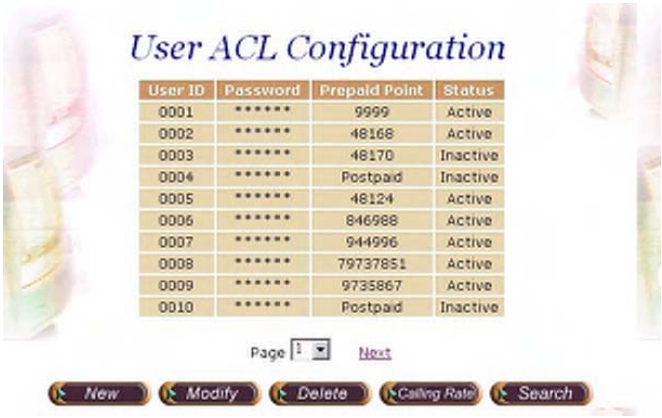

Figure 6.5-4

Parameters:

- User: User ID (0~9, *#)
- Password: Password (0~9, *#)
- Prepaid Point: Allowed prepaid point (When prepaid point is used, the system will deduct it automatically base on the rate setting.)
  - Postpaid: postpaid user
- Status:
  - Active: User is activeled
  - Inactive: User is inactived

☻ ***Note: 1. IP Authentication method must be set to " internal AAA" to talk effect.***

New a Calling Rate: The calling rate will have different appearance for different calling rate policy set in Radiu configuration.

Click **Calling Rate** button to add a new calling rate as figure 6.5-5.

Figure 6.5-5

Point per Second calling rate:

Calling rate (point per second) is used to convert prepaid point into prepaid time in second. For example, you can set calling rate to 5 for "100" prefix. When a

caller, which has 200 prepaid point, calls “100xxxx”, the max talk time will be 200/5=40 seconds. If a calling rate is set to “0”, it means free charge.

New a Calling Rate (Second per Point):
Click **Calling Rate** button to add a new calling rate as figure 6.5-6.

Figure 6.5-6

Second per Point calling rate:

. Calling rate (Second per point) is used to convert prepaid point into prepaid second in time. For example, you can set calling rate (Second) to 6, charge point to 1 for “113” prefix. It means that every 6 seconds charge 1 point. When a caller, which has 200 prepaid point, calls “113xxxx”, the max talk time, will be 200*6/1=1200 seconds.

Search Condition:
You can search a user by User ID, Prepaid or Postpaid condition as figure 6.5-7.

Figure 6.5-7

Routing Plan

The purpose of **Routing Plan** is to select T1/E1 trunk by your preference when there is a call from IP side to PSTN side. **The PSTN must be used in call flow edit or line hunting component to take effect.**

Hunting Group

Start Path: Configuration→Routing Plan→Hunting Group

Figure 6.6-1

Parameters:

- Group ID: Hunting Group ID
- Description: Description of Hunting Group
- Hunting Method: Route selection
  - Random: Random select a trunk within this hunting group
  - Priority: Select a trunk by priority. (Priority 1 has lowest priority; 9 has highest priority)

Start Path: Configuration→Routing Plan→Hunting Group→Detail

Figure 6.6-2

Parameters:

Group: 3 Description: TCC-03

- Interface ID: Interface ID
- Trunk ID: trunk id for group 3
- Priority: Trunk priority

Call Routing

The call routing can be used for hunting a PSTN trunk by prefix.

Start Path: Configuration→Routing Plan→Call Routing

Figure 6.6-3

Parameters:

- Number To Route: The dialed telephone number to be matched
- Group ID: Select the T1/E1 according to the selection of Hunting Group ID when dialed number is matched
- Allow Use Others: To select other T1/E1 trunk when all trunk are busy at your desired Hunting Group.
  - Allowed: The call will use other T1/E1 trunks which is not belong to the selected hunting group
  - Forbad: The call will be disconnected immediately

Radius Setting

When you have an external RADIUS server to do the AAA (Authorization, Authentication and Accounting), enter the correct parameter to the Radius setting. **It must be used in call flow to take effect**.

Start Path: Configuration→Radius Setting

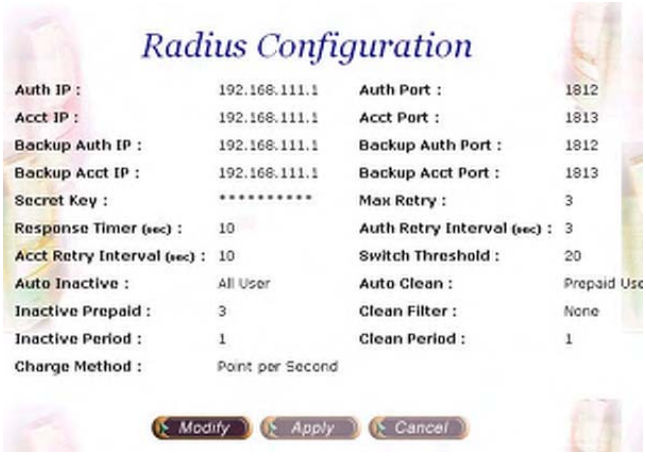

Figure 6.7-1

Parameters:

- Auth IP: Radius Authentication Server IP address (default)
- Auth Port: Radius Authentication Server Port
- Acct IP: Radius Account Server IP address
- Acct Port: Radius Account Server Port
- Backup Auth IP: Backup Radius Authentication Server IP address
- Backup Auth Port: Back Radius Authentication Server Port
- Backup Acct IP: Back Radius Account Server IP address
- Backup Acct Port: Back Radius Account Server Port
- Secret Key: The shared secret key with RADIUS Server
- Max Retry: The maximum retry times
- Response Time (sec): The maximum wait for response time from RADIUS Server
- Auth Retry Interval (sec): The internal to resend the Authentication packet to RADIUS Server.
- Acc Retry Interval (sec): The internal to resend the Account packet to RADIUS Server.
- Switch Threshold: Switch to alternate RADIUS Server when failures are occurred more than switch threshold.
- Auto Inactive: Auto inactive an unused or not
  - Disable: Don't auto inactive
  - Prepaid User: Auto inactive prepaid user only
  - Postpaid User: Auto inactive postpaid user only
  - All User: Auto inactive all unused user
- Inactive prepaid: The minimum credit point threshold for a prepaid user to be inactived
- Inactive Period: The max unaccess days for a postpaid user to be inactived
- Charge Method: Billing charge method selection
  - Point per Second: Point / calling rate = seconds
  - Second per Point: Point * calling rate / charge point = seconds
- Auto Clean: Auto clean the inactive user
  - Disable: Don't auto clean inactive user
  - Prepaid User: Auto clean prepaid user only
  - Postpaid User: Auto clean postpaid user only
  - All User: Auto clean inactive user
- Clean Filter: Auto clean filter
  - None: Auto clean users exceed clean period without access the network
  - Inactive: Auto clean only to inactive users
- Clean Period: The maximum unaccess days to clean up. When the clean filter is set Inactive, the unaccess day is start counting when the user is inacived

Apply Change

1. Some of modification needs to restart system before it is effective to system operation. “Apply the change” shows “***The change you mode need to restart the system for apply please confirm to restart or do it later?”*** Click on OK button to reboot the system.

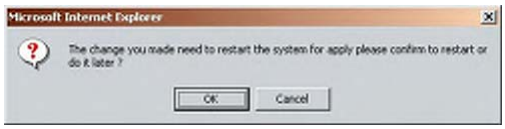
Microsoft Internet Explorer
The change you made need to restart the system for apply please confirm to restart or do it later ?
OK
Cancel

Figure 6.8-1

2. For the modification can be changed to fly, “Apply the Change” shows “***Are you sure to apply the running system?”*** Click on OK button to take effecting.

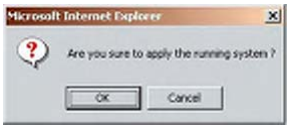

Figure 6.8-2

Chapter 7 System Control

System

Start path: Click Control→System

Figure 7.1-1

Parameter:

- Soft Reset: Soft Reset at DW-E/H
- Restart: Restart the DW-E/H
- Shutdown: Shutdown the DW-E/H

System Time

Timezone Setting

Step 1: If you would like to use timezone, click **Timezone** button to setup the system timezone as figure 7.2-1.

Figure 7.2-1

Stardand:

Step 2: Select the **Standard** option to setup the system predefined time zone as figure 7.2-2

Figure 7.2-2

Parameter:

- Time Zone:
  - Standard: Use a predefined standard time zone **(Refer Timezone to Country Mapping List)**
  - Customize: Use a user defined time zone
- Auto Daylinght Saving: Auto adjust daylinght saving time or not

User defined timezone :

Step 3: Select the **Customized** option and enter the time zone bias to set a user defined timezone as figure 7.2-3

Figure 7.2-3

Parameter:

- Daylight Bias: The offset added to the Bias when the time zone is in daylight saving time
- Daylight Start: The date that a time zone enters daylight time
  - Month: 01 to 12
  - Week Day: Sunday to Saturday
  - Apply Week (Day:01 to 05, Specifies the occurrence of day in the month; 01 = First occurrence of day, 02 = Second occurrence of day, ...and 05 = Last occurrence of day)
  - Hour: 00 to 23
- Standard Start: The date that a time zone enters daylight time
  - Month: 01 to 12
  - Week Day: Sunday to Saturday
  - Apply Week (Day:01 to 05, Specifies the occurrence of day in the month; 01 = First occurrence of day, 02 = Second occurrence of day, ...and 05 = Last occurrence of day)
  - Hour: 00 to 23

Network

DNS Server Setting:

Step 1: After successfully logon to the system, we need to change the network configuration. Click **Control→Network** to setup the network parameters as figure 7.3-1.

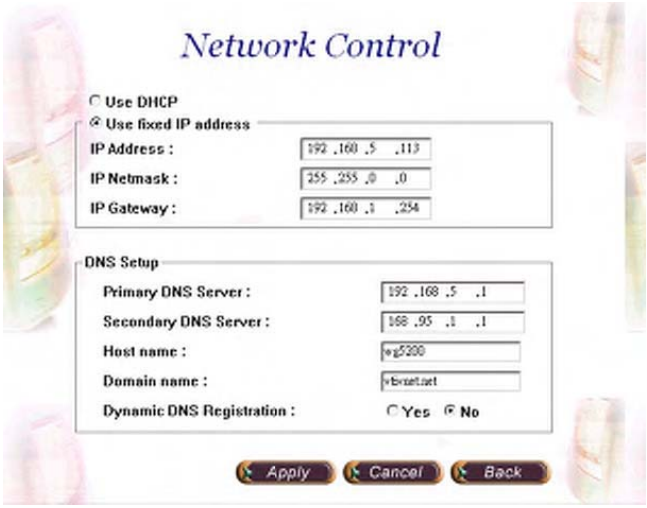

Figure 7.3-1

Parameter:

- Primary DNS Server: Primary DNS Server IP network
- Secondary DNS Server: Secondary DNS Server IP network
- Host Name: Host name used to register to DNS Server
- Domain Name: Domain name used to
- Dynamic DNS Registration: Enable Dynamic DNS registration or not

SNMP

Start path: Click **Control→SNMP→Community**

Figure 4.4-1

Parameter:

- Community Name: Community name for network manager system accessing
- Access Rights: Giving access right to the community

Start path: Click Control→SNMP→Trap

Figure 4.4-2

Parameter:

- Trap Community: Trap community name for NMS
- Trap Host: Trap host IP address

Note: It takes around 1-minute to update SNMP configuration and display successful message.

Prompt Manager

Start path: Click **Control→Prompt Manager**

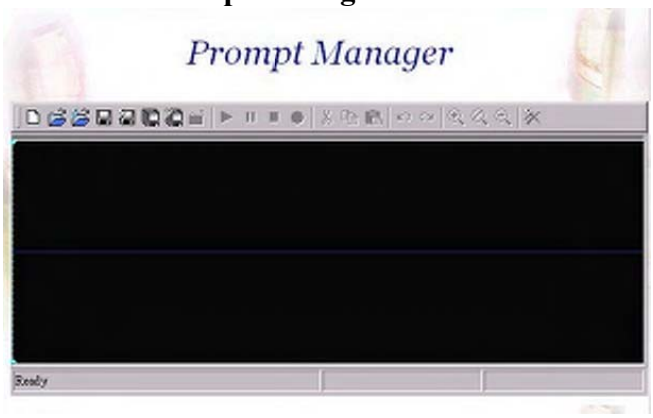

Figure 7.4-1

☻ **Note:**

1. **You mast has a sound card in your PC to record the voice. You need to set Network security in order to execute this recording. *Click Tool→Internet Option→Security→Custom Level.***

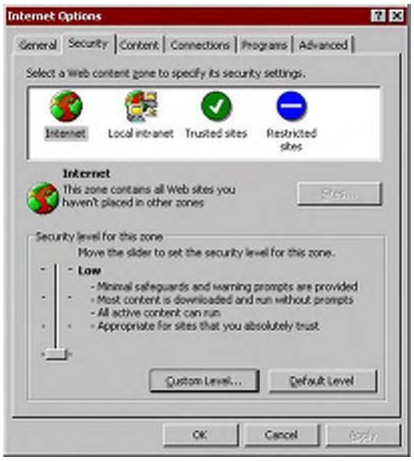

2. **Enable the following security to active setting:**
   Voice prompt editor:
   - Download unsigned ActiveX control: Enable
   - Initialize and script ActiveX control not marked as safe: Enable

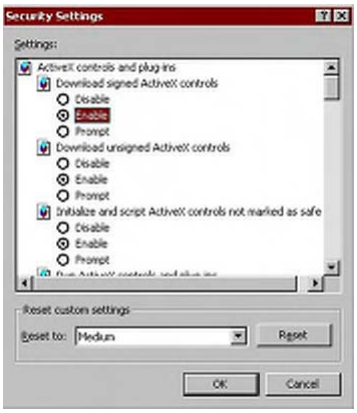

New, Record:

Step 1: Make sure you have installed microphone or other device when you want to record, Click **New** and **Record** buttons to record as figure 7.4-2.

Figure 7.4-2

Stop, Pause, Play:

Step 2: Click **Stop** or **Pause** button to stop record, and click **Play** button to listen the voice prompt as figure 7.4-3.

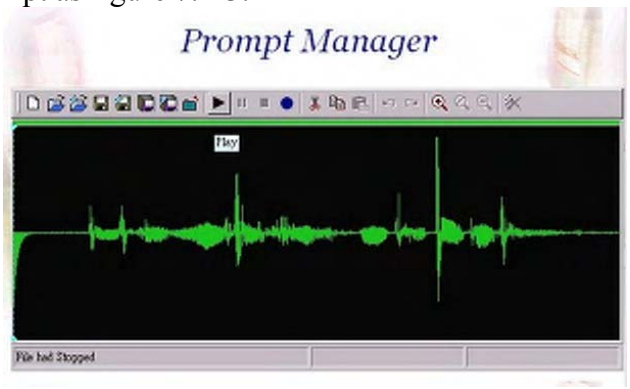

Figure 7.4-3

Save:

Step 3: Click Save button to saving the voice file at local path, and the screen shows ***Please input the file path and file name!!*** (i.e. c:\irene_test.raw) as figure 7.4-4.

Figure 7.4-4

Save Remote File:

Step 4: Click **Save Remote File** to saving the voice file at DW-E/H, and the screen shows ***"please input the file path and file name!!"*** (i.e. 9999.raw) as figure 7.4-5

Figure 7.4-5

☻ *Note: The file name must be " .raw" file format.*

Open Remote File:

Step 5: Click **Open Remote File** button to open voice file at DW-E/H and screen shows **Voice File List** as figure 7.4-6.

Figure 7.4-6

Open:

Step 6: Click **Open** button to open local host voice file and screen shows **Choose File** as figure 7.4-7.

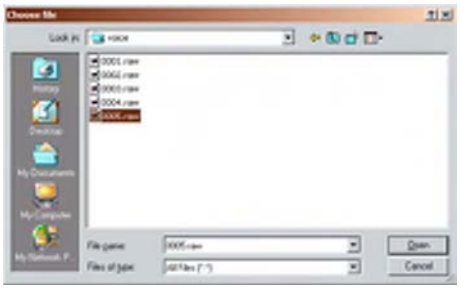

Figure 7.4-7

Close:

Step 7: Click Close button to close the voice file as figure 7.4-8.

Figure 7.4-8

Copy:

Step 8: Select the desired voice range and click **Copy** button as figure 7.4-9

7.4-9

Paste:

Step 9: Click **Paste** button to paste the voice range as figure 7.4-10.

Figure 7.4-10

Cut:

Step 10: Select the desired voice range and click **Cut** button as figure 7.4-11.

Figure 7.4-11

Save As: Refer the Section "Save"

Save Remote As: Refer the Section "Save Remote File"

Undo:

Step 13: Click **Undo** button to return modification, you can see the configuration that haven't be changed as figure 7.4-12.

Figure 7.4-12

Redo: Refer Section "Undo"

Zoom Zoom In Zoom Out:

Step 14: Select the desired voice range click **Zoom** button as figure 7.4-13.

Figure 7.4-13

Step 15: The screen shows the zoom out voice file range as figure 7.4-14.

Figure 7.4-14

Delete Remote file:

Step 16: Click **Delete Remote file** button to delete remote voice file as figure 7.4-15.

Figure 7.4-15

Call Flow Editor

Please refer section "Call Flow Editor"

Account Manager

Please refer section "Account Manager"

Upgrade

Step 1: Click "Control→Upgrade" to upgrade the software as figure 7.5-1.

Figure 7.5-1

Field Description:

- File Name: Upload the software file name
- Upload: Remote Upload the software at DW-E/H
- Apply: Remote apply the upload at DW-E/H

Relogin

Please refer section "Relogin"

Chapter 8 System Monitor

It provides a way to monitor the system status.

Line Summary Status

Show channel summary status.

Start Path: Monitor→Line Summary Status

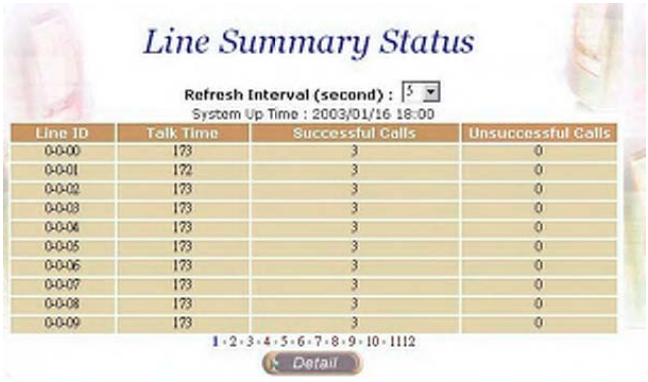

Figure 8.1-1

Field Description:

- Refresh Interval (second): Refresh interval time (1, 5, 10 seconds)
- Line ID: Line ID (format: Interface: trunk: channel)
- Talk Time: Total conversation time
- Successfully calls: Total successfully calls (connected calls)
- Unsuccessfully calls: Total unsuccessfully calls (unconnected calls)

See the line detail:

Selection the line and click **Detail** button as figure 8.1-2.

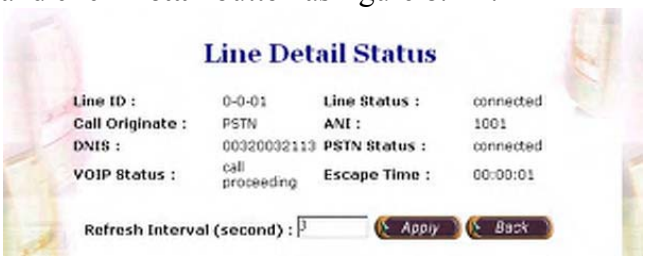

Figure 8.1-2

Refer to line detail for field description

Line Detail

Show detail channel status.

Start Path: Monitor→Line Detail

Line Detail Status
Refresh Interval (second) : 3
Line ID | Line Status | Call Originate | ANI String | DNIS String | PSTN Status | VOIP Status | Escape Time
0-0-00 | connected | PSTN | 1001 | 00900090113 | connected | call proceeding | 00:00:01
0-0-01 | connected | PSTN | 1001 | 00320032113 | connected | connected | 00:00:04
0-0-02 | connected | PSTN | 1001 | 00330033113 | connected | connected | 00:00:03
0-0-03 | connected | PSTN | 1001 | 00340034113 | connected | connected | 00:00:03
0-0-04 | connected | PSTN | 1001 | 00350035113 | connected | connected | 00:00:01
0-0-05 | connected | PSTN | 1001 | 00360036113 | connected | connected | 00:00:03
0-0-06 | connected | PSTN | 1001 | 00370037113 | connected | call proceeding | 00:00:01
0-0-07 | connected | PSTN | 1001 | 00380038113 | connected | connected | 00:00:04
0-0-08 | connected | PSTN | 1001 | 00390039113 | connected | connected | 00:00:02
0-0-09 | connected | PSTN | 1001 | 00400040113 | connected | connected | 00:00:03
1 2 3 4 5 6 7 8 9 10 11 12
Detail

Figure 8.2-1

Field Description:

- Refresh Interval (second): Refresh interval time (1, 5, 10 seconds)
- Line ID: Line ID
- Line Status: Current time status
- Call Originate: Call originate site
- ANI String: Calling party number
- DNIS String: Called party number
- PSTN Status: PSTN site status
- VoIP Status: IP site status
- Escape Time: Talk time

Event Log

Show system log status.

Start Path: Configuration→Event Log

Event Log Viewer
Type | Date | Time | Source | Category | Event ID
information | 2003/01/16 | 18:00:35 | WellgateSx00 | Welltech Sys | 9504
warning | 2003/01/16 | 18:00:35 | WellgateSx00 | Welltech Sys | 8700
warning | 2003/01/16 | 18:00:35 | WellgateSx00 | Welltech Sys | 8700
information | 2003/01/16 | 18:00:35 | WellgateSx00 | Welltech Sys | 9504
information | 2003/01/16 | 18:00:32 | WellgateSx00 | Welltech Sys | 9501
information | 2003/01/16 | 18:00:16 | WellgateSx00 | Welltech Sys | 9502
information | 2003/01/16 | 17:59:19 | AAAmgr | Welltech Sys | 9500
information | 2003/01/16 | 17:59:18 | WellgateSx00 | Welltech Sys | 9500
warning | 2003/01/16 | 17:58:51 | PK | Welltech Sys | 8707
information | 2003/01/16 | 17:57:54 | WellgateSx00 | Welltech Sys | 9504
warning | 2003/01/16 | 17:57:54 | WellgateSx00 | Welltech Sys | 8700
warning | 2003/01/16 | 17:57:54 | WellgateSx00 | Welltech Sys | 8700
information | 2003/01/16 | 17:57:54 | WellgateSx00 | Welltech Sys | 9504
information | 2003/01/16 | 17:57:51 | WellgateSx00 | Welltech Sys | 9501
information | 2003/01/16 | 17:57:35 | WellgateSx00 | Welltech Sys | 9502
1
System
Security
Detail
Clear

Figure 8.3-1

Field Description:

- Type: Event Log type

- Information
- Warring
- Error

- Date: Event created date
- Time: Event created time
- Source: Executable program
- Category: Event type
- Event ID: Event Log

☻ ***Note: You can click Clear button to clear all event log.***

See the detail event log:

Double click the log or select the log and click detail to see the log detail.

Figure 8.3-2

Event Description:

Event ID	Event Description	Description
8003	[GK]: [xxx.xxx.xxx.xxx:xxxx] not found or registered failure	Failed to register to H323 Gatekeeper
	[SIP Register]: [xxx.xxx.xxx.xxx:xxxx] not found or registered failure	Failed to registered to SIP Registratar Server
8700	DW-E/H application on the fly change	On the fly change (system change)
8703	[0]: evt: D CHANNEL STATUS: runkId=3, Status=1, Comment='', LOS=14, LOF=0, RAI=108, AIS=145, RAI_CRC=-1	D Channel and Trunk ID (ID: 0) not available
9500	DW-E/H application started	DW-E/H program start
9501	VoIP Board (0) started	Interface (ID:0) start
9502	H323 stack started	H323 stack start
9503	H323 GK [xxx.xxx.xxx.xxx:xxxx] found & registered	Registered to H323 Gatekeeper
	[SIP Register]: [xxx.xxx.xxx.xxxx] Found & Registered.	Registered to SIP Registratar Server
9504	PSTN trunk (0) alarm clear	Connect to PSTN
9505	[0]: evt: D CHANNEL STATUS: TrunkId=3, Status=0, Comment='', LOS=29, LOF=67, RAI=31, AIS=1, RAI_CRC=-1	D Channel and Trunk ID (ID:0) available
9600	SNTP client application started	Failed / Success to connect SNTP server

Debug Info

Start Path: Click **"Monitor→Debug Info"**

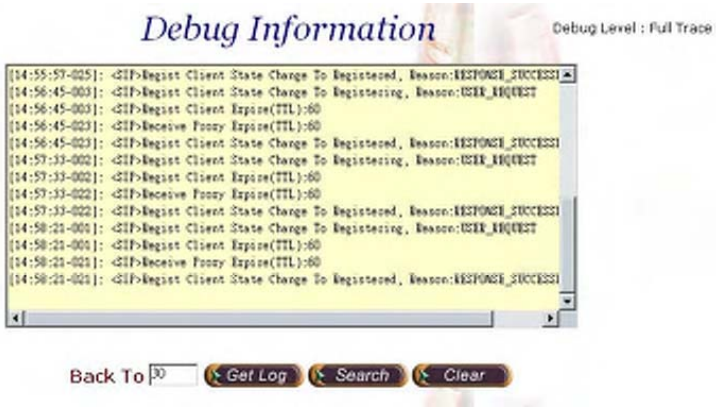

Figure 8.4-1

Filed Description:

- Get Log: Get debug log (-1~999)
- Search: Search debug logs
- Clear: Clear log

Ping

You can use the "Ping" to check an IP is active or not.

Start Path: Configuration→Ping

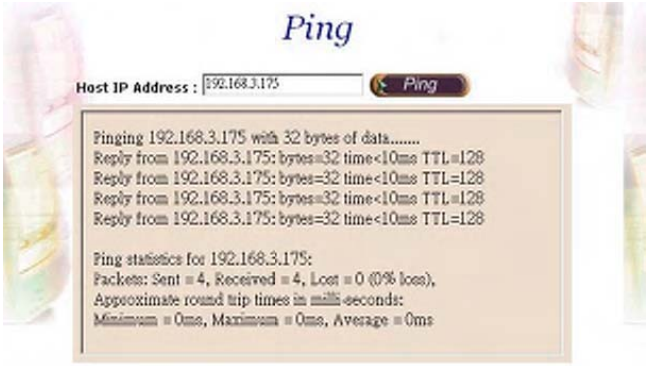
Ping
Host IP Address :
192.168.3.175
Ping
Pinging 192.168.3.175 with 32 bytes of data.....
Reply from 192.168.3.175: bytes=32 time<10ms TTL=128
Reply from 192.168.3.175: bytes=32 time<10ms TTL=128
Reply from 192.168.3.175: bytes=32 time<10ms TTL=128
Reply from 192.168.3.175: bytes=32 time<10ms TTL=128
Ping statistics for 192.168.3.175:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms

Figure 8.5-1

Field Description:

- Host IP Address: The IP address to ping

Remote Terminal

You can use the “Remote Terminal” to do the maintenance remotely.

Start Path: Configuration→Remote Terminal

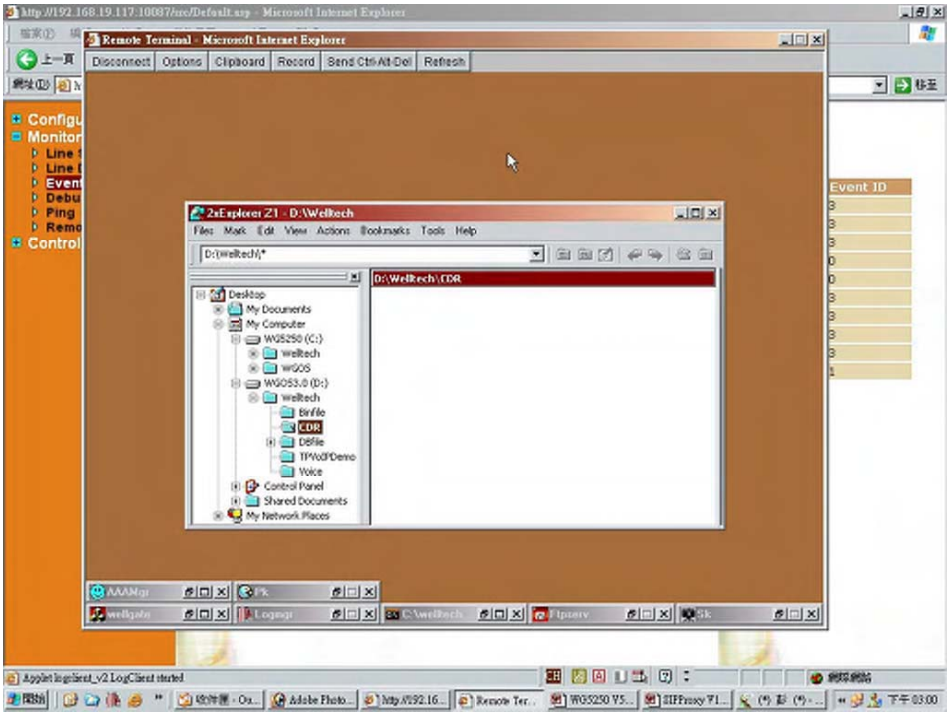

Figure 5.6-1

Field Description:

- Start: Enable remote terminal function (please turn on only for debug purpose)
- Stop: Disable remote terminal function
- Terminal: Start the remote terminal

Chat 9 Telnet & RS-232 Configuration

DW-E/H also can support to be managed by Telnet or Console port (RS-232) for basic operations.

Interface:

- Network: TCP/IP Telnet
- RS232:
  - Connect using: COM1
  - Baud Rate: 9600
  - Data bits: 8
  - Parity: None
  - Stop bits: 1
  - Flow Control: None
  - Wire: Null modem line (crossed)

Logon DW-E/H by Telnet

Use Windows build-in Hyper Terminal or other telnet terminal emulator to login (e.g. telnet 192.168.111.111:10086). User ID & password will be required for login (default login user id: admin, password: admin & user id: root, password: root).

Command List:

Command	Description
echo	Auto echo on or off
eventlog	Clean or show system log message
exit	Quit the current session
ipconfig	Configure or show network information
ping	Check an IP address is available or not
reboot	Reboot
reset	Soft-reset
shutdown	Shutdown
time	Reset or show system time.
timezone	Setup or show system timezone
useradmin	Manage user account.
help & ?	View command list

Echo: auto echo on or not

Command	Purpose
[root#]echo ?	Usage: echo on/off Example: echo on
[root#]echo on	Echo is on
[root#]echo off	Echo is off (default ralue)

Eventlog: show system log message

Command	Purpose
[root#]eventlog ?	Usage: eventlog [-clear] Example: eventlog eventlog -clear
[root#]eventlog	***Show system eventlog:*** ***Eventlog example:*** Time: 2003-06-19 20:15:17 Event ID: 8700 Type: Warning Source : wellgate5x00 Description: [0]: evt: TRUNK ALARM: TrunkId=3 Time: 2003-06-19 20:15:17 Event ID: 8700 Type: Warning Source : wellgate5x00 Description: [0]: evt: TRUNK ALARM: TrunkId=2 Time: 2003-06-19 20:15:14 Event ID: 9501 Type: Information Source : wellgate5x00 Description: [0]: evt: BOARD STARTED: SLOT:8 ***Press any key to continue or press 'Q' to quit***
[root#]eventlog -clear	Clear all event log

Exit: Quit the current session

Command	Purpose
[root#]exit	Quit the current session

Ipconfig: Configuration or show network information

Command	Purpose
[root#] ipconfig ?	Usage: ipconfig [-delete dns] [-dhcp] [-dns IPAddress1 IPAddress2] [-ip IPAddress -mask Mask -gateway Gateway] Example : ipconfig -ip 192.168.111.111 -mask 255.255.0.0 -gateway 192.168.1.254 : ipconfig -dhcp : ipconfig -dns 192.168.1.1 : ipconfig -delete dns
[root#]ipconfig	***Show current network configuration*** USE FIXED IP (*or DHCP*) IP Address : 192.168.5.113 Subnet Mask : 255.255.0.0 Default Gateway : 192.168.1.254 DNS Servers : 192.168.5.1 168.95.1.1
[root#]ipconfig –delete dns	***Delete the DNS servers setting*** USE FIXED IP IP Address : 192.168.5.113 Subnet Mask : 255.255.0.0 Default Gateway : 192.168.1.254 DNS Servers :
[root#]ipconfig –dchp	***Enable DHCP*** USE DHCP IP Address : 192.168.5.10 Subnet Mask : 255.255.0.0 Default Gateway : 192.168.1.254

	DNS Servers : 192.168.5.1 168.95.1.1
[root#]ipconfig –ip 61.220.126 28 –mask 255.255.0.224 –gateway 61.220.126.1	***Use fixed network configuration*** USE FIXED IP IP Address : 61.220.126.28 Subnet Mask : 255.255.255.1 Default Gateway : 61.220.126.254 DNS Servers :
[root#]ipconfig –ip 61.220.126.115	***Changes IP address only.*** USE FIXED IP IP Address : 61.220.126.115 Subnet Mask : 255.255.255.1 Default Gateway : 61.220.126.254 DNS Servers :
[root#]ipconfig –dns 210.59.126.53	***Changes DNS configuration only.*** USE FIXED IP IP Address : 61.220.126.115 Subnet Mask : 255.255.255.1 Default Gateway : 61.220.126.254 DNS Servers : 210.59.126.53

Ping: Check an IP address is available or not

Command	Purpose
[root#] ping ?	Usage: ping IP. Example: ping 127.0.0.1
[root#]ping 61.220.126.1	***Ping result*** Reply from 61.220.126.1 bytes=64 time=1ms TTL=29 Reply from 61.220.126.1 bytes=64 time=1ms TTL=29 Reply from 61.220.126.1 bytes=64 time=1ms TTL=29 Reply from 61.220.126.1 bytes=64 time=1ms TTL=29

Reboot:

Command	Purpose
[root#] reboot ?	***Reboot System*** Are You Sure? (Y/N)
[root#]reboot Are You Sure?(Y/N)y	***DW-E/H are rebooting***

Shutdown:

Command	Purpose
[root#] shutdown ?	***Shutdown System*** Are You Sure? (Y/N)
[root#]shutdown Are You Sure?(Y/N)y	***DW-E/H are shutting down***

Reset:

Command	Purpose
[root#] reset ?	***Soft reset System*** Are You Sure? (Y/N)
[root#]reset Are You Sure?(Y/N)y	

Time: Reset or show system time

Command	Purpose
[root#] time ?	Usage : time YYYY-MM-DD HH:NN:SS Example : Time 2002-01-01 12:00:00
[root#]time	***Show current time*** The current time is 2003-06-20 15:17:30
[root#]time 2003-07-29 23:14:53	***Change system bios time***

Timezone: Setup or show system timzone

Command	Purpose
[root#] timezone ?	***Fixed Zone List:*** 01. Afghanistan Standard Time 02. Alaskan Standard Time 03. Arab Standard Time 04. Arabian Standard Time 05. Arabic Standard Time 06. Atlantic Standard Time 07. AUS Central Standard Time 08. AUS Eastern Standard Time 09. Azores Standard Time 10. Canada Central Standard Time 11. Cape Verde Standard Time 12. Caucasus Standard Time 13. Cen. Australia Standard Time 14. Central America Standard Time 15. Central Asia Standard Time 16. Central Europe Standard Time 17. Central European Standard Time 18. Central Pacific Standard Time 19. Central Standard Time 20. China Standard Time 21. Dateline Standard Time 22. E. Africa Standard Time 23. E. Australia Standard Time 24. E. Europe Standard Time 25. E. South America Standard Time 26. Eastern Standard Time 27. Egypt Standard Time 28. Ekaterinburg Standard Time 29. Fiji Standard Time 30. FLE Standard Time 31. GMT Standard Time 32. Greenland Standard Time 33. Greenwich Standard Time 34. GTB Standard Time 35. Hawaiian Standard Time 36. India Standard Time 37. Iran Standard Time 38. Israel Standard Time 39. Korea Standard Time 40. Mexico Standard Time 41. Mexico Standard Time 2 42. Mid-Atlantic Standard Time 43. Mountain Standard Time 44. Myanmar Standard Time 45. N. Central Asia Standard Time 46. Nepal Standard Time 47. New Zealand Standard Time 48. Newfoundland Standard Time 49. North Asia East Standard Time 50. North Asia Standard Time 51. Pacific SA Standard Time 52. Pacific Standard Time 53. Romance Standard Time 54. Russian Standard Time 55. SA Eastern Standard Time 56. SA Pacific Standard Time 57. SA Western Standard Time 58. Samoa Standard Time 59. SE Asia Standard Time 60. Singapore Standard Time 61. South Africa Standard Time 62. Sri Lanka Standard Time 63. Taipei Standard Time 64. Tasmania Standard Time 65. Tokyo Standard Time 66. Tonga Standard Time 67. US Eastern Standard Time 68. US Mountain Standard Time 69. Vladivostok Standard Time 70. W. Australia Standard Time 71. W. Central Africa Standard Time 72. W. Europe Standard Time 73. West Asia Standard Time 74. West Pacific Standard Time 75. Yakutsk Standard Time

	Usage1 : timezone Zone (1 to 75) AutoDaylight (Y or N) Example1 : timezone 1 Y Usage2 : timezone -custom Bias DaylightBias DaylightStart StandardStart Bias : -12:00 to +13:00 DaylightBias : -12:00 to +13:00 DaylightStart : MM (Month: 01 to 12) ; WD (Day of week: 00 to 06) DD (Day:01 to 05 ;Specifies the occurrence of day in the month; 01 = First occurrence of day, 02 = Second occurrence of day, ..., 05 = Last occurrence of day HH (Hour:00 to 23) StandardStart : MM (Month: 01 to 12) ; WD (Day of week: 00 to 06) DD (Day:01 to 05 ;Specifies the occurrence of day in the month; 01 = First occurrence of day, 02 = Second occurrence of day, ..., 05 = Last occurrence of day HH (Hour:00 to 23) Example2 : timezone -custom +08:00 -01:00 04-00-01-02 10-00-05-02
[root#]timezone	***Show current timezone info*** Time Zone : (40) Mexico Standard Time (GMT -06:00) Daylight Bias : -01:00 Daylight Start : 05-00-01 02:00 Standard Start : 09-00-05 02:00 Auto Daylight : Y
[root#]timezone 40 n	***Use pre-defined timezone*** Time Zone : (40) Mexico Standard Time (GMT -06:00) Daylight Bias : -01:00 Daylight Start : 05-00-01 02:00 Standard Start : 09-00-05 02:00 Auto Daylight : n
[root#]timezone -custom +08:00 -01:00 05-00-01-03 09-00-05-03	***Use customized timezone*** Time Zone : (99) Customized (GMT 08:00) Daylight Bias : -01:00 Daylight Start : 05-00-01 03:00 Standard Start : 09-00-05 03:00 Auto Daylight : Y

Please refer Timezone to Country Mapping List

Useradmin: Manager user account

Command	Purpose
[root#] useradmin ?	Usage: useradmin [-add User] [-delete User] [-password User] Example: useradmin -add irene
[root#]useradmin	***Show the current login user account*** root
[root#]useradmin -list	***Show the current user account list*** rdmin root irene
[root#] useradmin -add irene Password : irene	***Add the new user account: irene***

Confirm : irene Add user Success.	
[root#] useradmin -delete 1111 Are You Sure?(Y/N)y	***Delete the user: 1111***
[root#] useradmin -password root New Password : 1234 Confirm : 1234	***Change the user: root's password.***

Chat 10 LCD Display Configuration

DW-E/H provides a front panel LCD for basic operations.

Button List:

Button List	Description
	When the DW-E/H is ready, the LCD screen shows as blow Ready | 04-03-03 16:40
Enter	Press Enter to select command Event Log IP Config
ESC	Quit the current command
▲	Up or previous edit mode
▼	Next or previous edit mode

Command Tree:

Main Menu

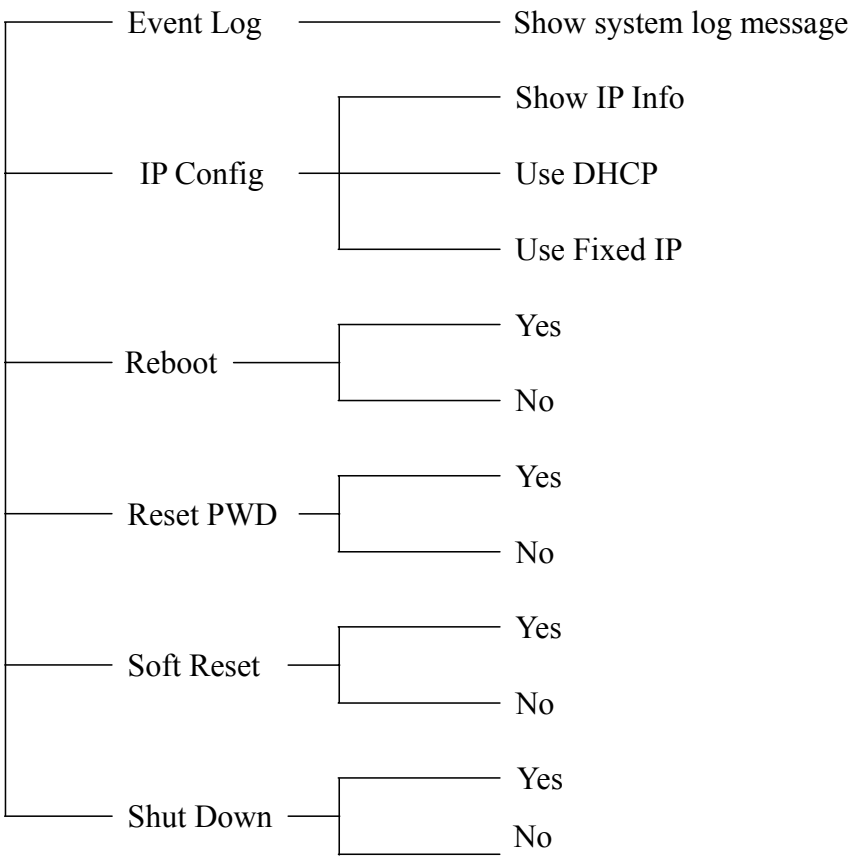

Event Log:

Configure	LCD Display
▲	Previous event log
▼	Next event log
Enter	Show detail event log
▲	Previous line
▼	Next line
ESC	Quit detail event log viewing
ESC	Quit to main menu

IP Config:

Configure	LCD Display
▲	Select Network configuration
▼	Select Network configuration
Enter	Configure Network
▲	Increase the digit apply to network setting
▼	Decrease the digit apply to network setting
Enter	Apply change to network information
ESC	Quit network setting
ESC	Quit to main menu

Reboot:

Configure	LCD Display
▲	Select Reboot or not
▼	Select Reboot or not
Enter	Reset user: root's (or admin) user password
ESC	Quit Reboot configure
ESC	Quit to main menu

Reset:

Configure	LCD Display
▲	Select user to change password
▼	Select user to change password
Enter	Change user password
▲	Increase the alphabet apply to user password setting
▼	Decrease the alphabet apply to user password setting
ESC	Quit Reset configure
ESC	Quit to main menu

Soft Reset:

Configure	LCD Display
▲	Select Reset or not
▼	Select Reset or not

Enter	Reset or not
ESC	Quit Reset configure
ESC	Quit to main menu

Shutdown:

Configure	LCD Display
▲	Select Shutdown or not
▼	Select Shutdown or not
Enter	Shutdown or not
ESC	Quit Shutdown configure
ESC	Quit to main menu

Appendix 1 Call Flow Example

One Stage Dialing (Gatekeeper Mode)

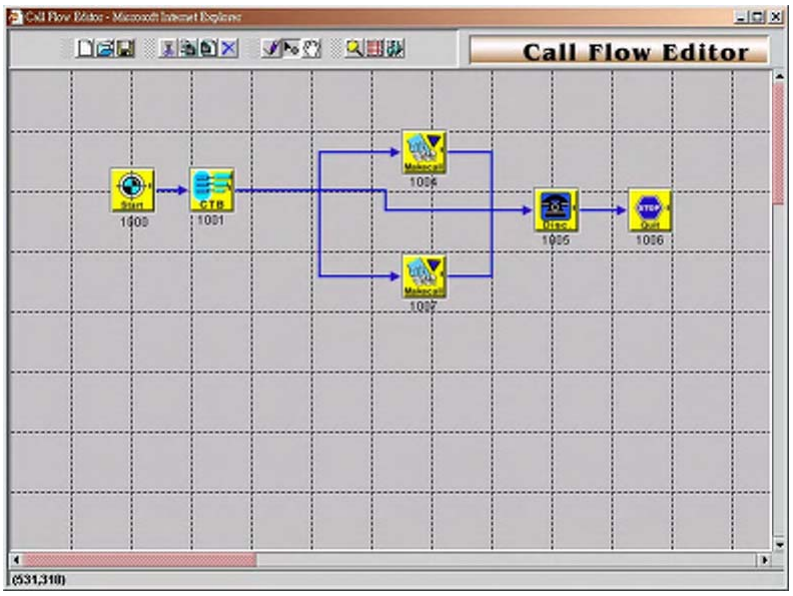

Example Description:

Components	Contents
Start Component ID: 1000	Next Component: 1001
CTB Component ID: 1001	PSTN To: 1004 H.323 To: 1007 SIP To: 1005

1007 Route for H.323Gatekeeper call

MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Reason: PSTN normal call clear Next Component: 1006
Quit Component: 1006	

1004 Route for PSTN call

MakeCall Component ID: 1004	Route Mode: **Gatekeeper** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component: 1006	

Example Used Call Flow:

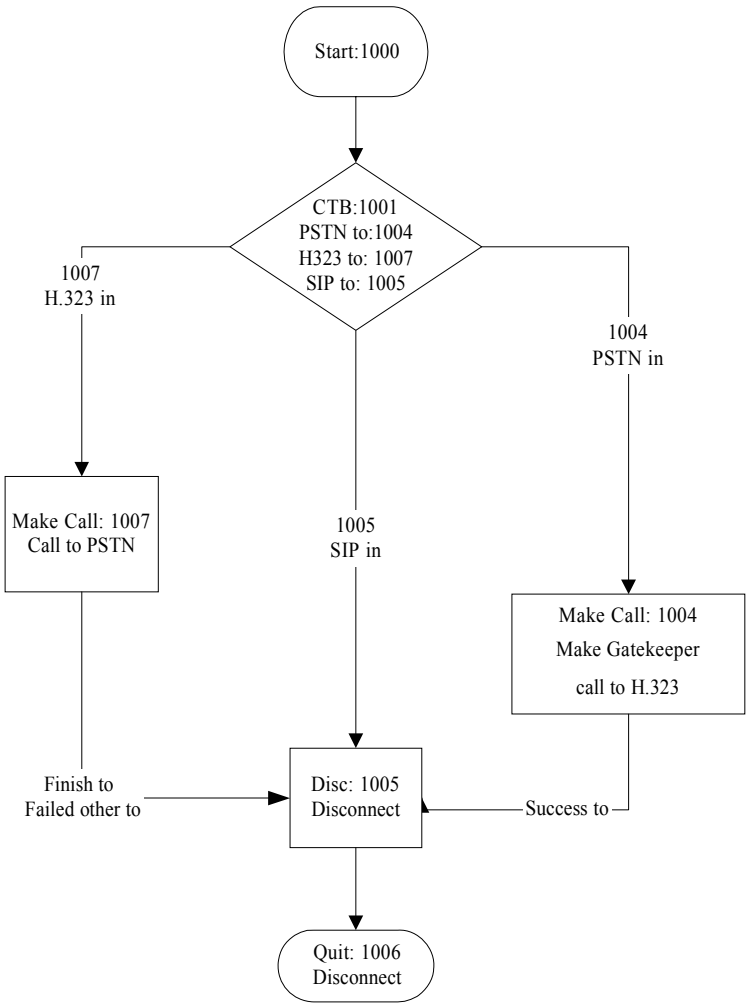

One Stage Dialing (SIP Proxy Mode)

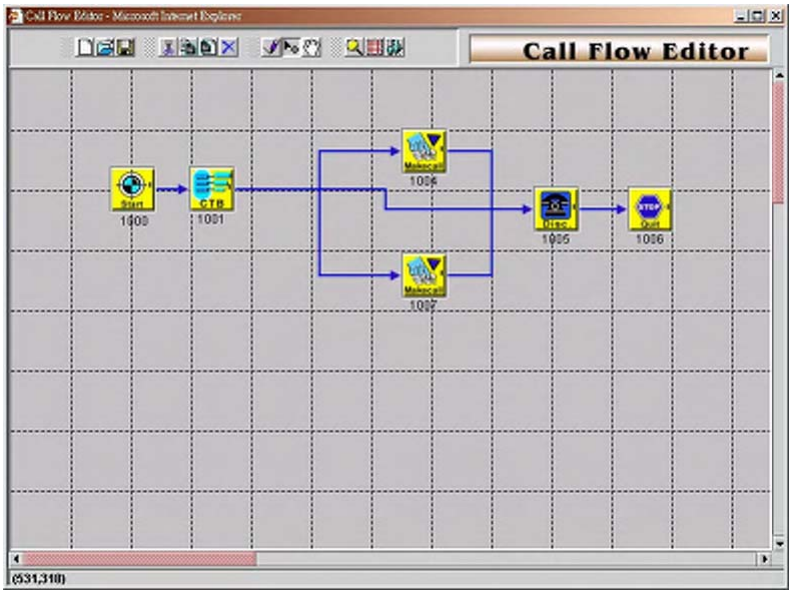

Example Description:

Components	Contents
Start Component ID: 1000	Next Component: 1001
CTB Component ID: 1001	PSTN To: 1004 H.323 To: 1005 SIP To: 1007

1007 Route for SIP Proxy call

MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Reason: PSTN normal call clear Next Component: 1006
Quit Component ID: 1006	

1004 Route for PSTN call

MakeCall Component ID: 1004	Route Mode: **SIP Proxy Call** Finish To: 1005 Failed Other To: 1005
Disconnect Component ID: 1005	Next Component: 1006
Quit Component ID: 1006	

Example Used Call Flow:

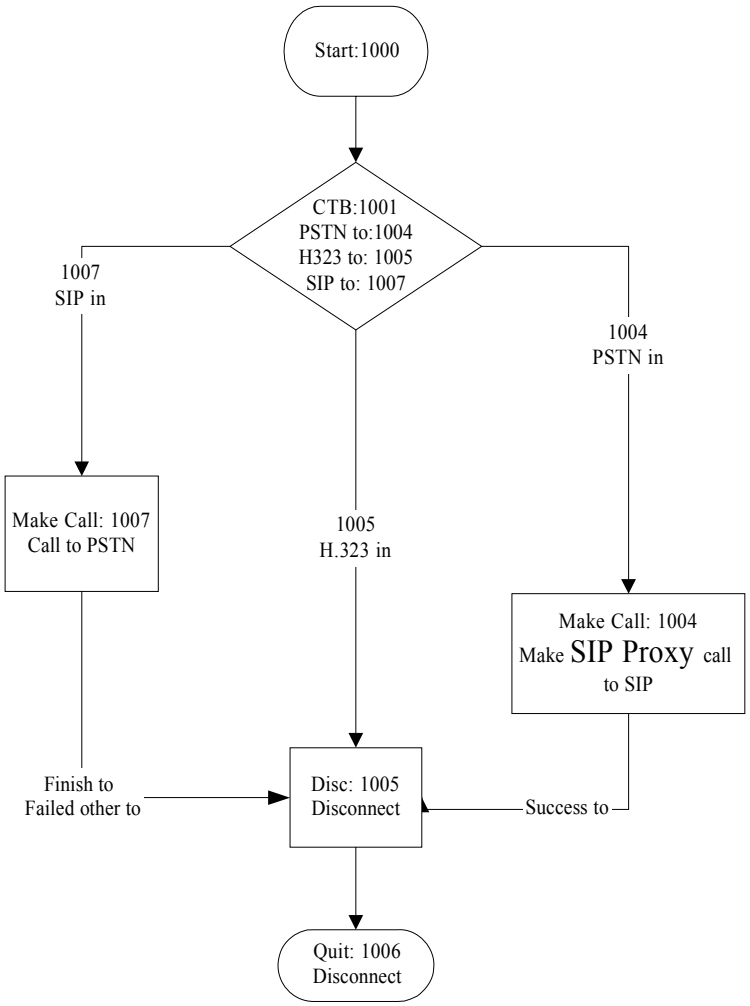

One Stage Dialing (Peer to Peer Mode)

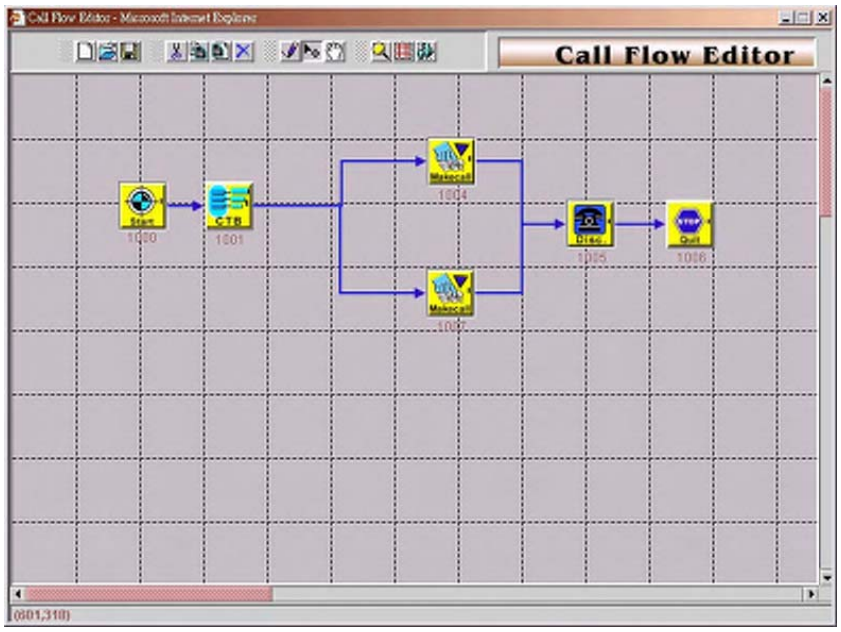

Example Description:

Components	Contents
Start Component ID: 1000	Next Component: 1001
CTB Component ID: 1001	PSTN To: 1004 H.323 To: 1007 SIP To: 1007

1007 Route for SIP Proxy or H.323 Gatekeeper call

MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component ID: 1006	

1004 Route for PSTN call

MakeCall Component ID: 1004	Route Mode: **P2P Call** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component ID: 1006	

Example Used Call Flow:

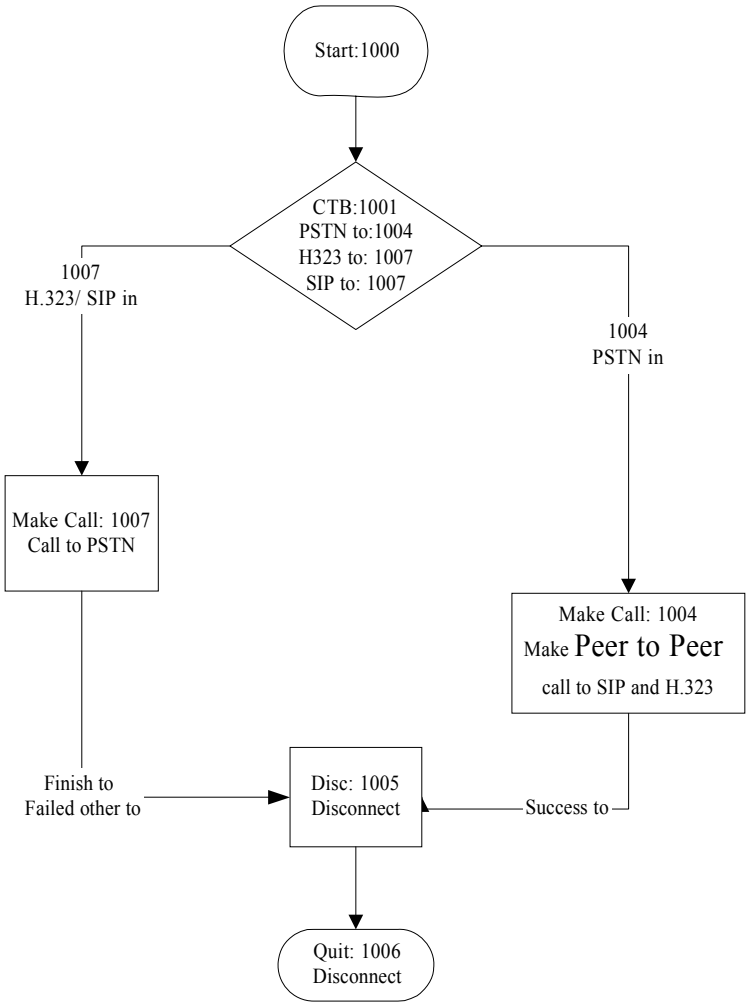

Two Stage Dialing (GK and SIP Proxy Mode)

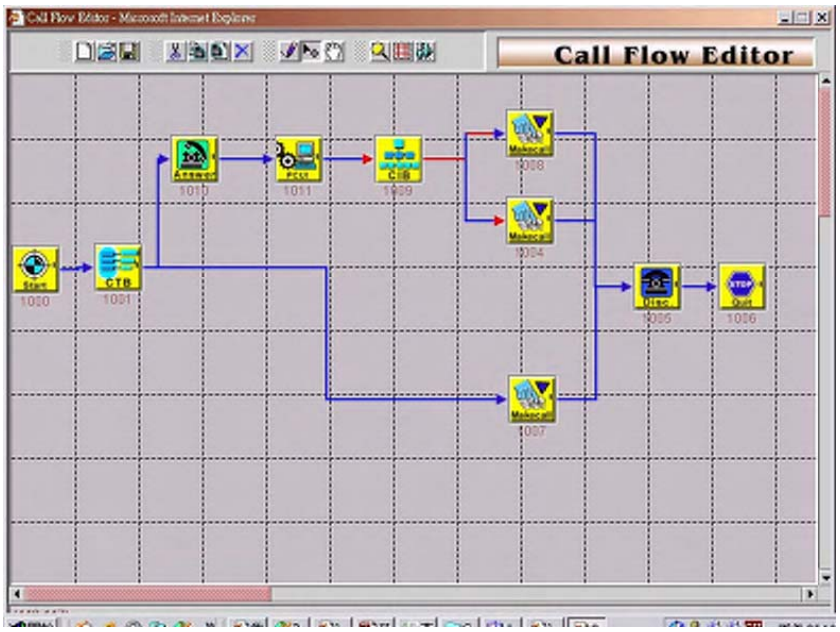

Example Description:

Components	Contents
Start Component ID: 1000	Next Component: 1001
CTB Component ID: 1001	PSTN To: 1010 H.323 To: 1007 SIP To: 1007

1007 Route for SIP Proxy and H.323 Gatekeeper call

MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component ID: 1006	

1010 Route for PSTN call

Anser	Next Component: 1011

Component ID: 1010	
PCUI Component ID: 1011	Play Type: Voice or dial tone Voice File: 0001.raw Max DTMF: 20 Result Append To: DNIS End of DTMF: # Next Component: 1009
CIB Component ID: 1009	Info Type: ANI Prefix: 9 goto: 1008 Prefix: 8 goto: 1004
MakeCall Component ID: 1008	Route Mode: **Gatekeeper Call** Finish To: 1005 Failed Other To: 1005
MakeCall Component ID: 1004	Route Mode: **SIP Proxy Call** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component ID: 1006	

Example Used Call Flow:

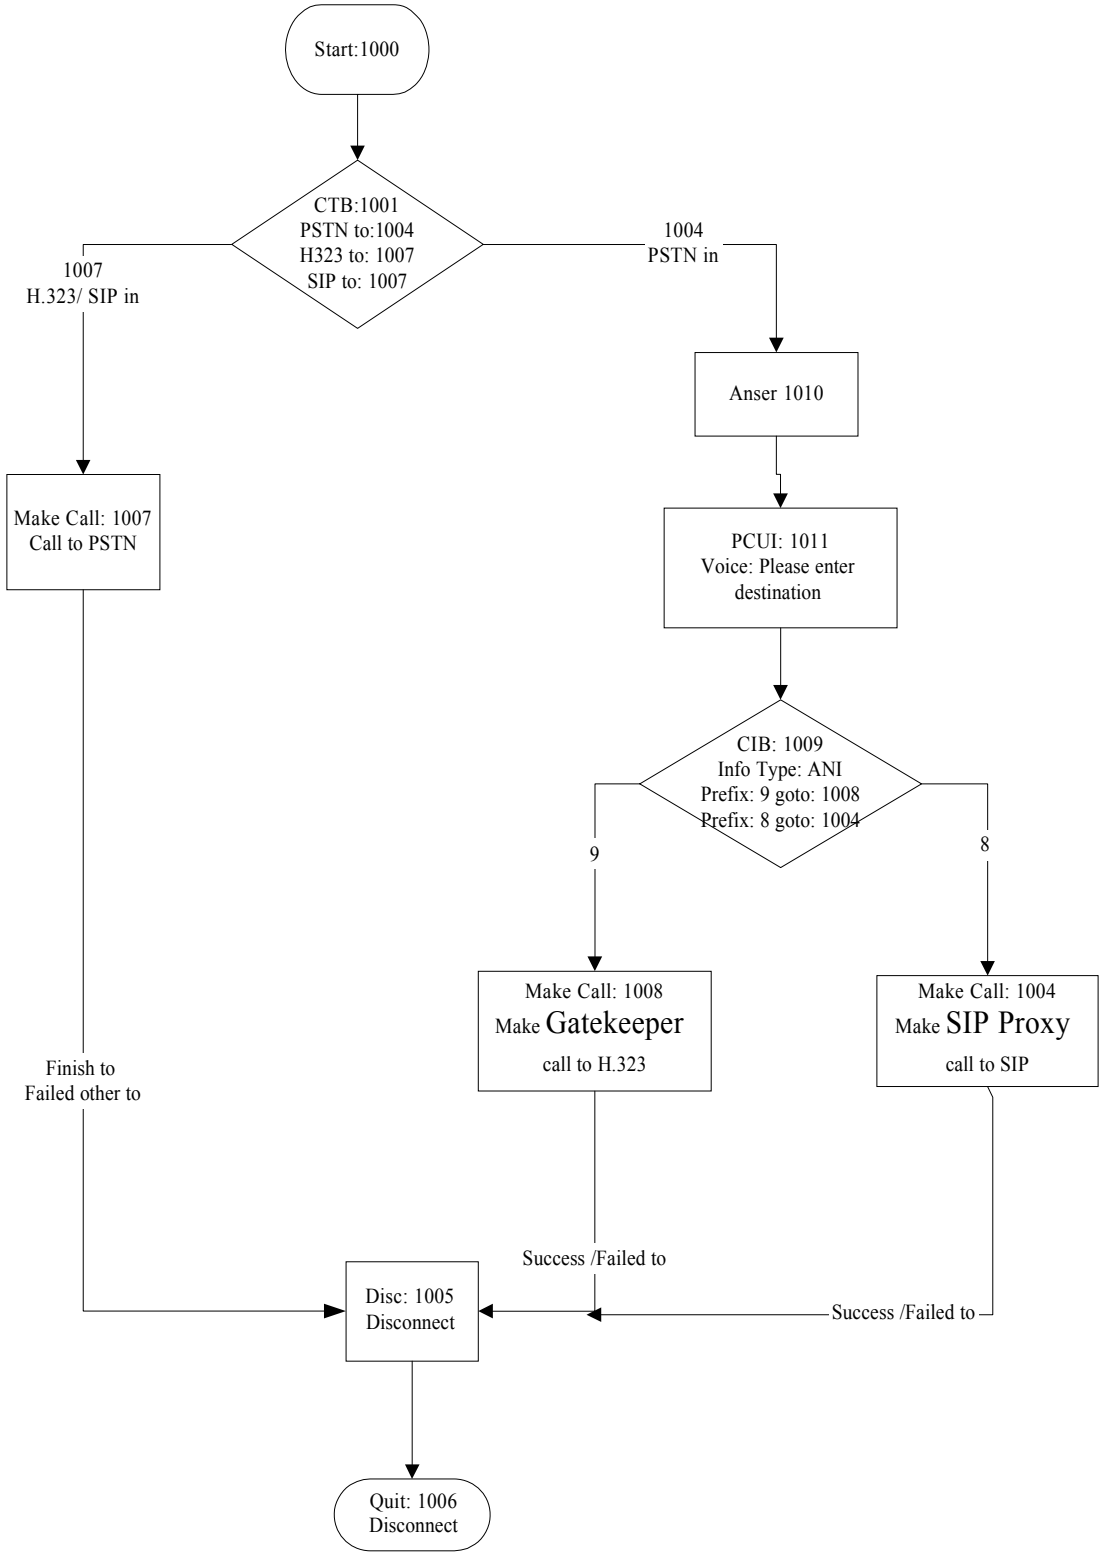

Two Stage Dialing with AAA (GK and SIP Proxy Mode)

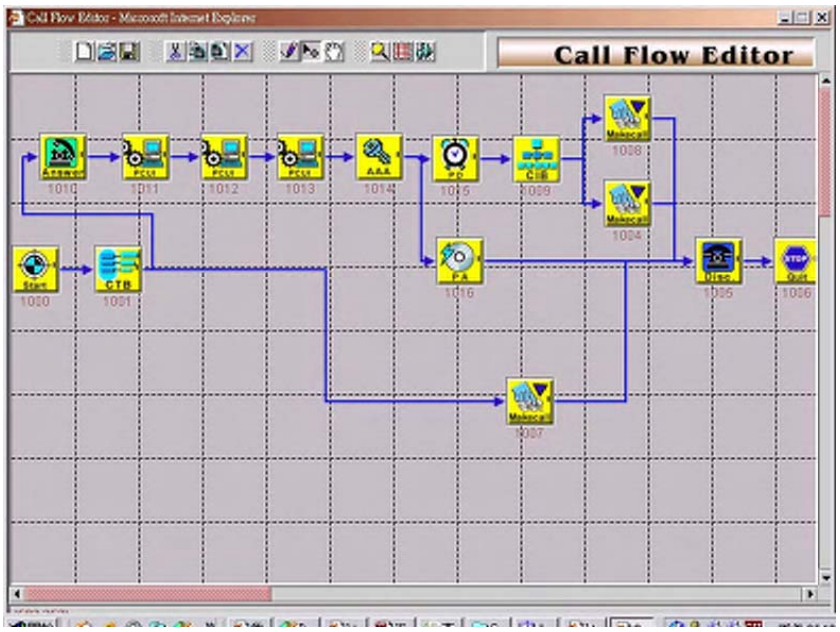

Example Description:

Components	Contents
Start Component ID: 1000	Next Component: 1001
CTB Component ID: 1001	PSTN To: 1010 H.323 To: 1007 SIP To: 1007

1007 Route for SIP Proxy and H.323 Gatekeeper call

MakeCall Component ID: 1007	Route Mode: **PSTN** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit Component ID: 1006	

1010 Route for PSTN call

Anser Component ID: 1010	Next Component: 1011
PCUI Component ID: 1011	Play Type: Voice or dial tone Voice File: 0002.raw Max DTMF: 20 Result Append To: User ID End of DTMF: # Next Component: 1012
PCUI Component ID: 1012	Play Type: Voice or dial tone Voice File: 0003.raw Max DTMF: 20 Result Append To: Password End of DTMF: # Next Component: 1013
PCUI Component ID: 1013	Play Type: Voice or dial tone Voice File: 0001.raw Max DTMF: 20 Result Append To: DNIS End of DTMF: # Next Component: 1014
AAA Component ID: 1014	Success to: 1015 Failed to: 1016
PD Component: 1015	Voice File: 0004.raw Language: English Interrupted: No Next Component: 1009
PA Component: 1016	Dynamic Play: Disable Voice File: 0005.raw Language: English Interrupted: No Next Component: 1005
CIB Component ID: 1009	Info Type: ANI Prefix: 9 goto: 1008 Prefix: 8 goto: 1004
MakeCall Component ID: 1008	Route Mode: **Gatekeeper Call** Finish To: 1005 Failed Other To: 1005
MakeCall Component ID: 1004	Route Mode: **SIP Proxy Call** Finish To: 1005 Failed Other To: 1005
Disc Component ID: 1005	Next Component: 1006
Quit	

Example Used Call Flow:

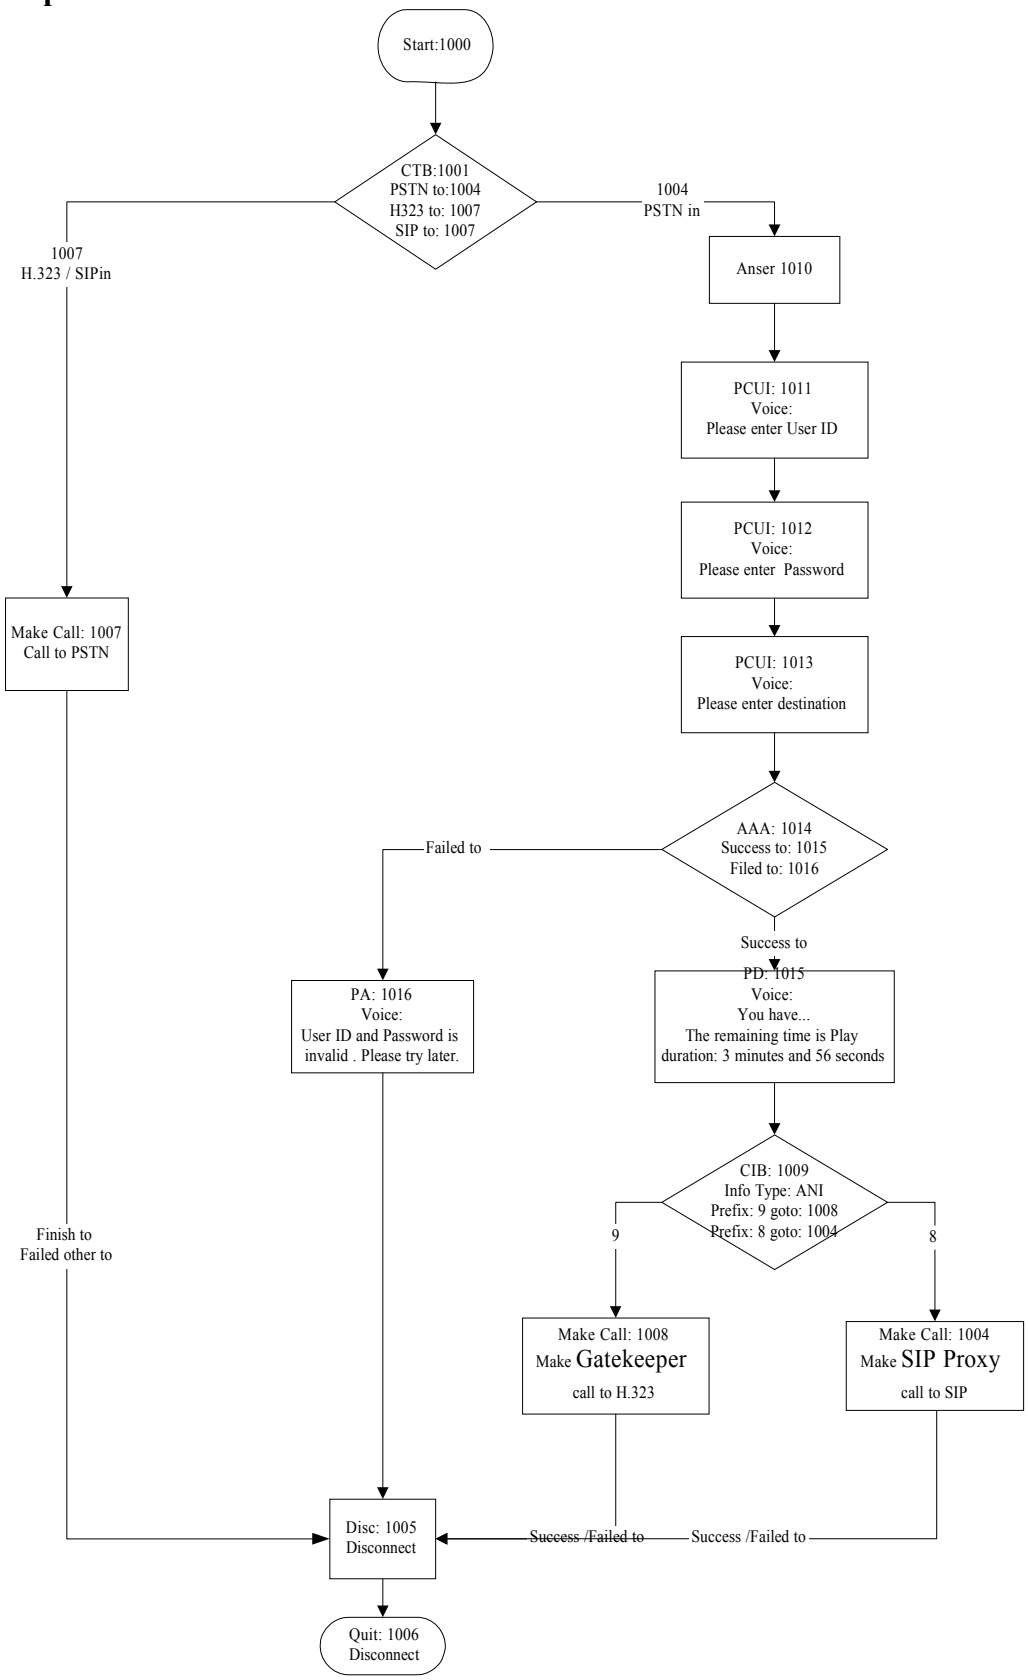

Appendix 2 Java plug-in Installation

You need to install Java Plug-in before using call flow editor, prompt manager and upgrade. Please confirm you JRE version is 1.3.1_02 or above if your PC has already installed Java.

Notice - Microsoft Internet Explorer
Notice
Java plug-in required! Please install JRE 1.3.1_02 or above version and try this function again!
To download JRE, you can visit this site
http://java.sun.com/j2se/1.3/download.html
Close

After downloaded the java runtime version (1.3.1 or later) from Sun, you just follow the wizard to install the Java runtime. When you see the display shows “Select Browsers”, **do not select any option item**, press **Next** button to continue.

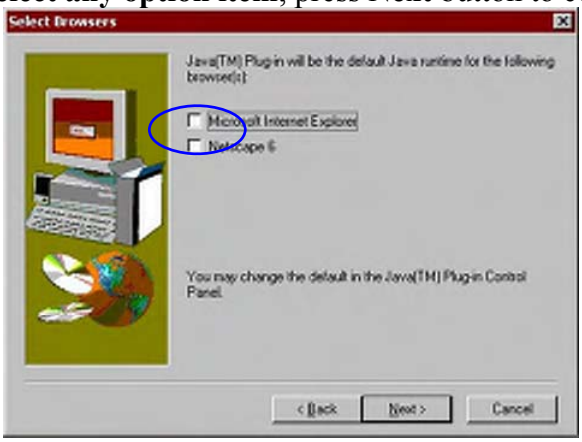
Select Browsers
Java(TM) Plug-in will be the default Java runtime for the following browser(s):
Microsoft Internet Explorer
Netscape 6
You may change the default in the Java(TM) Plug-in Control Panel
< Back
Next >
Cancel

You also need to set newer versions of stored pages. ***Click Tool→Internet Option →General→Setting.***

After success, restart your browser to take effect.

Appendix 4 Quick Start Check List

Host Network:

IP Address: _____. _____. _____. _____
Sub-Mask: _____. _____. _____. _____
Default-Gateway:_____. _____. _____. _____

Interface Network:

IP Address: _____. _____. _____. _____
Sub-Mask: _____. _____. _____. _____
Default-Gateway: _____. _____. _____. _____

►***H.323 Call:***

VoIP Configuration:

Ⓥ Register to Gatekeeper
GK IP Address: _____. _____. _____. _____
GK RAS Port: _____

Ⓥ Peer To Peer
Refer to User Guide-Phone Book setting

H.245 tunneling: Ⓥ Enable Ⓥ Disable
Fast Connect: Ⓥ Enable Fast Start Ⓥ Early H.245 Ⓥ Disable
Separate H.245 after Fast Start: Ⓥ Yes Ⓥ No
Fast Start Enabled Codec:
Ⓥ G.711 a-law
Ⓥ G.711 u-law
Ⓥ G.729
Ⓥ G.729 A/B
Ⓥ G.723.1 (5.3K)
Ⓥ G.723.1 (6.3A)

Codec Select Priority:
___G.711 a-law
___G.711 u-law
___G.729
___G.729 A/B
___G.723.1 (5.3K)
___G.723.1 (6.3A)

►***SIP Call:***

VoIP Configuration: Ⓥ Peer To Peer

Ⓥ Register to SIP Proxy Server
Registar Proxy Server: _____. _____. _____. _____
Registar Proxy Port: _____
Registar User ID: _____
Registar Password: _____
Outbound Proxy Server: _____. _____. _____. _____
Outbound Proxy Port: _____
Outbound User: _____
Outbound Port: _____

Refer to User Guide-Phone Book setting

180 SDP: Ⓥ Yes Ⓥ No

183 SDP: ⓞ Yes ⓞ No

Local Codec Codec:

ⓞ G.711 a-law
ⓞ G.711 u-law
ⓞ G.729
ⓞ None
ⓞ G.723.1 (5.3K)
ⓞ G.723.1 (6.3A)

Accept Proxy Call Only: ⓞ Yes ⓞ No

PSTN Interface:

PCM encoding: ⓞ A-law ⓞ Mu-law

PCM Idle Pattern:

Default (-1): ⓞ 0x55 A-law ⓞ 0xff u-law ⓞ specified: ___

Clock Source: ⓞ External ⓞ Internal

ⓞ **E1**

Framing Method:

ⓞ Automatic CRC4 or Double Frame selection
ⓞ Double Frame Format
ⓞ CRC4 multi-frame
ⓞ CRC4 extend multi-frame

Line Code: ⓞ HDB3 ⓞ AMI

ISDN/PRI:

Termination Site: ⓞ Network ⓞ User site

Variance:

ⓞ Euro ISDN
ⓞ Australia ISDN
ⓞ Hong Kong ISDN
ⓞ Korea ISDN

CAS:

CAS Idle ABCD signal: Default (-1): specified: _____

ⓞ **E1 MFC R2**
ⓞ **E1 CAS R2**

Variance:

ⓞ E1 R2D MODIFIED
ⓞ E1 R2 MF Aregntina 7digits no ANI
ⓞ E1 R2 MF Aregntina 7digits with ANI
ⓞ E1 R2 MF Bolivia 7digits no ANI
ⓞ E1 R2 MF Bolivia 7digits with ANI
ⓞ E1 R2 MF Brazil 7digits no ANI
ⓞ E1 R2 MF Brazil 7digits with ANI
ⓞ E1 R2 MF Chile 7digits no ANI
ⓞ E1 R2 MF Chile 7digits with ANI
ⓞ E1 R2 MF China 7digits no ANI
ⓞ E1 R2 MF China 7digits with ANI
ⓞ E1 R2 MF Czech-Republic 7digits no ANI
ⓞ E1 R2 MF Czech-Republic 7digits with ANI
ⓞ E1 R2 MF Egypt no ANI
ⓞ E1 R2 MF Egypt with ANI
ⓞ E1 R2 MF India 10Digits no ANI
ⓞ E1 R2 MF India 10Digits with ANI
ⓞ E1 R2 MF Indonesia 7Digits no ANI
ⓞ E1 R2 MF Indonesia 7Digits with ANI

- ⑦ E1 R2 MF Israel(Bezeq) no ANI
- ⑦ E1 R2 MF Israel(Bezeq) with ANI
- ⑦ E1 R2 MF ITU 7digits no ANI
- ⑦ E1 R2 MF ITU 7digits with ANI
- ⑦ E1 R2 MF KOREA 7digits no ANI
- ⑦ E1 R2 MF KOREA 7digits with ANI
- ⑦ E1 R2 MF Malaysia 7Digits no ANI
- ⑦ E1 R2 MF Malaysia 7Digits with ANI
- ⑦ E1 R2 MF Mexico 7digits no ANI
- ⑦ E1 R2 MF Mexico 7digits with ANI
- ⑦ E1 R2 MF Philippines no ANI
- ⑦ E1 R2 MF Philippines with ANI
- ⑦ E1 R2 MF Thailand 7Digits no ANI
- ⑦ E1 R2 MF Thailand 7Digits with ANI
- ⑦ E1 R2 MF Uruguay 7Digits no ANI
- ⑦ E1 R2 MF Uruguay 7Digits with ANI
- ⑦ E1 R2 MF Venezuela 7Digits no ANI
- ⑦ E1 R2 MF Venezuela 7Digits with ANI

⑦ **T1**

Framing Method:

- ⑦ super frame
- ⑦ 4-frame multi-frame
- ⑦ 12 frame multi-frame (D4)
- ⑦ extend super frame without CRC6
- ⑦ extend super frame with CRC6
- ⑦ 72-Frame Multi-Frame

Line Code: ⑦ AMI ⑦ B8ZS

ISDN/PRI:

Termination Site: ⑦ Network ⑦ User site

Variance:

- ⑦ NI2 ISDN
- ⑦ 5ESS 9 ISDN
- ⑦ 5ESS 10 ISDN
- ⑦ DMS100 ISDN
- ⑦ NTT ISDN (INS1500)

CAS:

CAS Idle ABCD signal: Default (-1): specified: _____

- ⑦ **T1**

CAS Variance:

- ⑦ T1 E&M BellCore Feature Group D Wink Start
- ⑦ T1 E&M Delay Start
- ⑦ T1 E&M Feature Group A Immediate Start
- ⑦ T1 E&M Feature Group B Wink Start
- ⑦ T1 E&M Feature Group D Wink Start(ANI B4 ADDR)
- ⑦ T1 E&M Feature Group D Wink Start
- ⑦ T1 E&M Immediate Start
- ⑦ T1 E&M Wink Start
- ⑦ T1 GroundStart FXO
- ⑦ T1 GroundStart FXS
- ⑦ T1 LoopStart FXO
- ⑦ T1 LoopStart FXS

Appendix 5 Interface LED Description

Interface Real Panel:

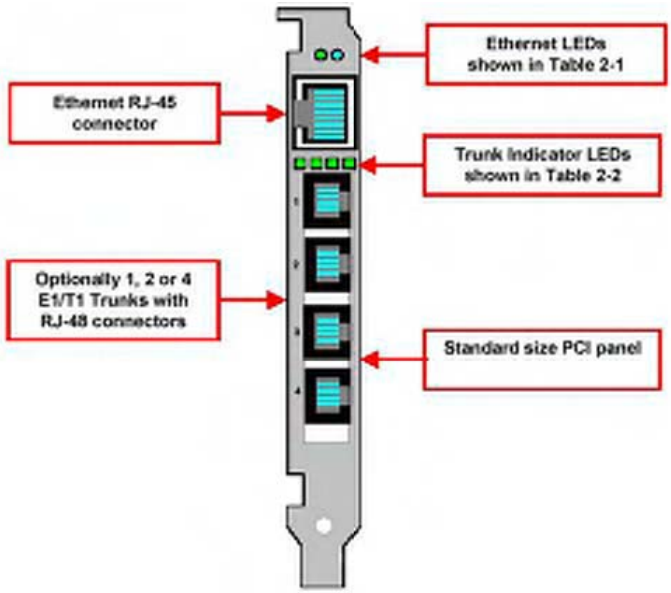
Ethernet LEDs shown in Table 2-1
Ethernet RJ-45 connector
Trunk Indicator LEDs shown in Table 2-2
Optionally 1, 2 or 4 E1/T1 Trunks with RJ-48 connectors
Standard size PCI panel

Ethernet LED:

LED Color	LED Function
Yellow	Receive
Green	Ethernet connection is ON (Link)

Trunk LED:

LED Color	LED Function
Green	Normal Operation Trunk is synchronized (No Alarms)
Red	LOS - Indicates Loss of Signal
Red	LFA - Indicates Loss of Frame Alignment
Red	AIS - Alarm Indication Signal (The Blue Alarm)
Red	RAI - Remote Alarm Indication (The Yellow Alarm)

Trunk RJ48 Wiring:

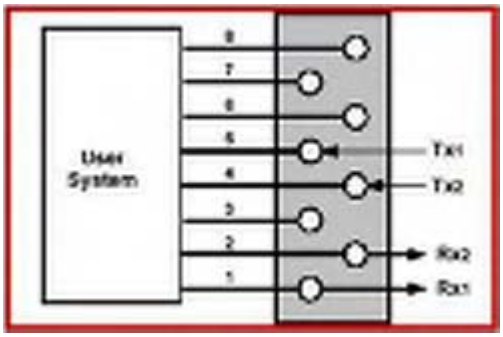

Appendix 6 Build-in Voice Prompt Index

File Name	Description
0001.raw	Please enter the destination
0002.raw	Please enter your user ID
0003.raw	Please enter your password
0004.raw	You have
0005.raw	User ID or password is invalid. Please try later.

Appendix 7 Timezone to Country Mapping List

Greenwich Mean Time & Country List	Time Zone
(GMT-12:00) International Date Line West	21. Dateline Standard Time
(GMT-11:00) Midway Island, Samoa	58. Samoa Standard Time
(GMT-10:00) Hawaii	35. Hawaiian Standard Time
(GMT-09:00) Alaska	02. Alaskan Standard Time
(GMT-08:00) Pacific Time (US & Canada); Tijuana	52. Pacific Standard Time
(GMT-07:00) Mountain Time (US & Canada)	43. Mountain Standard Time
(GMT-07:00) Chihuahua, La Paz, Mazatlan	41. Mexico Standard Time 2
(GMT-07:00) Arizona	68. US Mountain Standard Time
(GMT-06:00) Saskatchewan	10. Canada Central Standard Time
(GMT-06:00) Guadalajara, Mexico City, Monterrey	40. Mexico Standard Time
(GMT-06:00) Central Time (US & Canada)	19. Central Standard Time
(GMT-06:00) Central America	14. Central America Standard Time
(GMT-05:00) Indiana (East)	67. US Eastern Standard Time
(GMT-05:00) Eastern Time (US & Canada)	26. Eastern Standard Time
(GMT-05:00) Bogota, Lima, Quito	56. SA Pacific Standard Time
(GMT-04:00) Santiago	51. Pacific SA Standard Time
(GMT-04:00) Caracas, La Paz	57. SA Western Standard Time
(GMT-04:00) Atlantic Time (Canada)	06. Atlantic Standard Time
(GMT-03:30) Newfoundland	48. Newfoundland Standard Time
(GMT-03:00) Greenland	32. Greenland Standard Time
(GMT-03:00) Buenos Aires, Georgetown	55. SA Eastern Standard Time
(GMT-03:00) Brasilia	25. E. South America Standard Time
(GMT-02:00) Mid-Atlantic	42. Mid-Atlantic Standard Time
(GMT-01:00) Cape Verde Is.	11. Cape Verde Standard Time
(GMT-01:00) Azores	09. Azores Standard Time
(GMT) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London	31. GMT Standard Time
(GMT) Casablanca, Monrovia	33. Greenwich Standard Time
(GMT+01:00) West Central Africa	71. W. Central Africa Standard Time
(GMT+01:00) Sarajevo, Skopje, Warsaw, Zagreb	17. Central European Standard Time
(GMT+01:00) Brussels, Copenhagen, Madrid, Paris	53. Romance Standard Time
(GMT+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague	16. Central Europe Standard Time
(GMT+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna	72. W. Europe Standard Time
(GMT+02:00) Jerusalem	38. Israel Standard Time
(GMT+02:00) Helsinki, Kyiv, Riga, Sofia, Tallinn, Vilnius	30. FLE Standard Time
(GMT+02:00) Harare, Pretoria	61. South Africa Standard Time
(GMT+02:00) Cairo	27. Egypt Standard Time
(GMT+02:00) Bucharest	24. E. Europe Standard Time
(GMT+02:00) Athens, Istanbul, Minsk	34. GTB Standard Time
(GMT+03:00) Nairobi	22. E. Africa Standard Time
(GMT+03:00) Moscow, St. Petersburg, Volgograd	54. Russian Standard Time

(GMT+03:00) Kuwait, Riyadh	03. Arab Standard Time
(GMT+03:00) Baghdad	05. Arabic Standard Time
(GMT+03:30) Tehran	37. Iran Standard Time
(GMT+04:00) Baku, Tbilisi, Yerevan	12. Caucasus Standard Time
(GMT+04:00) Abu Dhabi, Muscat	04. Arabian Standard Time
(GMT+04:30) Kabul	01. Afghanistan Standard Time
(GMT+05:00) Islamabad, Karachi, Tashkent	73. West Asia Standard Time
(GMT+05:00) Ekaterinburg	28. Ekaterinburg Standard Time
(GMT+05:30) Chennai, Kolkata, Mumbai, New Delhi	36. India Standard Time
(GMT+05:45) Kathmandu	46. Nepal Standard Time
(GMT+06:00) Sri Jayawardenepura	62. Sri Lanka Standard Time
(GMT+06:00) Astana, Dhaka	15. Central Asia Standard Time
(GMT+06:00) Almaty, Novosibirsk	45. N. Central Asia Standard Time
(GMT+06:30) Rangoon	44. Myanmar Standard Time
(GMT+07:00) Krasnoyarsk	50. North Asia Standard Time
(GMT+07:00) Bangkok, Hanoi, Jakarta	59. SE Asia Standard Time
(GMT+08:00) Taipei	63. Taipei Standard Time
(GMT+08:00) Perth	70. W. Australia Standard Time
(GMT+08:00) Kuala Lumpur, Singapore	60. Singapore Standard Time
(GMT+08:00) Irkutsk, Ulaan Bataar	49. North Asia East Standard Time
(GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi	20. China Standard Time
(GMT+09:00) Yakutsk	75. Yakutsk Standard Time
(GMT+09:00) Seoul	39. Korea Standard Time
(GMT+09:00) Osaka, Sapporo, Tokyo	65. Tokyo Standard Time
(GMT+09:30) Darwin	07. AUS Central Standard Time
(GMT+09:30) Adelaide	13. Cen. Australia Standard Time
(GMT+10:00) Vladivostok	69. Vladivostok Standard Time
(GMT+10:00) Hobart	64. Tasmania Standard Time
(GMT+10:00) Guam, Port Moresby	74. West Pacific Standard Time
(GMT+10:00) Canberra, Melbourne, Sydney	08. AUS Eastern Standard Time
(GMT+10:00) Brisbane	23. E. Australia Standard Tim
(GMT+11:00) Magadan, Solomon Is., New Caledonia	18. Central Pacific Standard Time
(GMT+12:00) Fiji, Kamchatka, Marshall Is.	29. Fiji Standard Time
(GMT+12:00) Auckland, Wellington	47. New Zealand Standard Time
(GMT+13:00) Nuku'alofa	66. Tonga Standard Time

Appendix 8 IP Bandwidth Requirement

Compression	*Packet duration*	*30 voice paths Bandwidth (kbps)*	*60 voice paths Bandwidth (kbps)*	*120 voice paths Bandwidth (kbps)*
7.231.1 (5.3kbps)	30 ms	480	960	1920
	60 ms	320	640	1280
	90 ms	267	534	1067
7.231.1 (6.4kbps)	30 ms	512	1024	2048
	60 ms	352	704	1408
	90 ms	299	598	1195
G.729A (8kbps)	20 ms	720	1440	2880
	40 ms	480	960	1920
	60 ms	400	800	1600
G.711 (PCM) (64kbps)	20 ms	2400	4800	9600
	40 ms	2160	4320	8640
	60 ms	2080	4160	8320

Appendix 9 Release Complete Cause Code

H.225 Release Complete Reason to cause IE mapping

RelaseCompleteReason code	Corresponding Q.931/Q.850 cause vale
noBandwidth	34 - No circuit/channel available
gatekeeperResources	47 – Resource Unavailable
unreachableDestination	3 – No route to destination
destinationRejection	16 – Normal call clearing
invaliRevision	88 – Incompatible destination
noPermission	111 – Interworking, unspecified
unreachableGatekeeper	38 – Network out of order
Gateway Resources	42 – Switching equipment comgestion
badFormatAddress	28 – Invalid number format
adaptiveBusy	41 – Temporary Failure
inConf	17 – User busy
undefineReason	31 – Normal, unspecified
FacilityCallDeflection	16 – Normal call clearing
securityDenied	31 – Normal, unspecified
calledPartyNotRegistered	20 – Subscriber absent
callerNotRegistered	31 – Normal, unspecified

PSTN to SIP Cause Code Mapping

PSTN Cause Code	Description	SIP Event
1	Unallocated number	404 Not found
2	No route to specified transit network	404 Not found
3	No route to destination	404 Not found
17	User busy	486 User here
18	No user response	480 Temporarily unavailable
19	No answer from the user	
20	Subscriber absent	
21	Call Rejected	403 Forbidden
22	Number changed	410 Gone
26	Non-selected user clearing	404 Not found
27	Destination out of order	404 Not found
28	Address incomplete	484 Address incomplete
29	Facility rejected	501 Not implemented
31	Normal, unspecified	404 Not found
34	No, circuit available	503 Service unavailable
38	Network out of order	503 Service unavailable
41	Temporary failure	503 Service unavailable
42	Switching equipment congestion	503 Service unavailable
47	Resource unavailable	503 Service unavailable
55	Incoming calls barred within Closed User Group(CUG)	403 Forbidden
58	Bearer capability not presently available	403 Forbidden
65	Bearer capability not implemented	501 Not implemented
79	Service or option not implemented	501 Not implemented
87	User not member of Closed User Group (CUG)	503 Service Unavailable
88	Incompatible destination	400 Bad request
95	Invalid message	400 Bad request
102	Recovery on Expires timeout	408 Request timeout
111	Protocol error	400 Bad request
Any code other than those listed above:		500 Internal server error

SIP to PSTN Cause Code Mapping

IP Event	Description	PSTN Cause Code
404 Not found	No route to destination	3
486 User here	User busy	17
480 Temporarily unavailable	No user response	18
		18
		20
403 Forbidden	Call Rejected	21
410 Gone	Number changed	22
404 Not found	Unallocated number	3
404 Not found	Unallocated number	3
484 Address incomplete	Address incomplete	28
501 Not implemented	Service or option not implemented	79
404 Not found	Unallocated number	3
503 Service unavailable	Service or option unavailable	63
503 Service unavailable	Service or option unavailable	63
503 Service unavailable	Service or option unavailable	63
503 Service unavailable	Service or option unavailable	63
503 Service unavailable	Service or option unavailable	63
403 Forbidden	Bearer Capability not authorized	21
403 Forbidden	Service or option not implemented	79
501 Not implemented	Service or option not implemented	79
501 Not implemented	Service or option not implemented	79
503 Service Unavailable	Service or option unavailable	63
400 Bad request	Interworking, unspecified	95
400 Bad request	Interworking, unspecified	95
408 Request timeout	Recovery on Expires timeout	102
400 Bad request	Protocol error	111
500 Internal server error	Any code other than those listed above:	127

Q1. Forgotten user password to logon DW-E/H.

Answer:

a. Logon by a user has Administrator right to reset the user's password
b. If there is no any users can logon, use the following user/password for emergency recovery:
   User: Serial no (from license card)
   Password: first 8 characters of "License Key" (from license card)
c. Use the LCD control panel to change the user id: admin or root's password.

Q2. *In H.323 Mode*: Cannot hear ring back tone for PSTN caller.

Answer:

Normally, the ring back tone is generated by the nearest PABX connected to DW-E/H. If a caller from PSTN site cannot hear the ring back tone, please check:

a. Consult to PABX/PSTN vender to clarify the PABX/PSTN will generate ring back tone.
b. For Fast Start mode, make sure the far end VoIP end point will have ring tone generated. For example, a PSTN subscriber calls a VoIP H.323 Lan- Phone. When it is on Fast Start mode, DW-E/H will cut through the voice path after receive Fast Start Ack. Please make sure the Far End VoIP Endpoint will generate ring back tone over RTP media path to DW-E/H.
c. If you really need DW-E/H to generate PSNT ring back tone, please do the following setting:
   - Turn on "local ring back" from "Interface -> Trunk" for each trunk required local ring back tine generation.
   - Disable Fast Start for H.323 outgoing call (set to disable or H.323 incoming call only.)

Q3. *In H.323 Mode*: DW-E/H cannot keep registering to Gatekeeper after Gatekeeper restarted.

Answer:

a. Check whether WG5200's register time to live is too long or not. If yes, make it shorter from "H.323 -> Register Time to Live". If we make it longer, it means it might need take long time to re-register to Gatekeeper after Gatekeeper failed or restart. If it is very short, will cause more IP traffic.
b. Check whether Gatekeeper has a preset TTL setup or not. If so, the GK TTL will overwrite the DW-E/H's TTL request by using the default value.

Q4. *In SIP Mode*: DW-E/H cannot keep registering to SIP Register Server after Register Server restarted.

Answer:

a. Check whether DW-E/H's registar IP address, port, user id and password are correct.
b. Check whether Register Server has a preset TTL setup or not. If so, the Register Server TTL will overwrite the DW-E/H's TTL request by using the default value.

Q5. DW-E/H cannot make a success call.

Answer:

a. Check PSTN trunk ready to work or not. You need to have the following event generated - "9504: trunk alarm clear (trunk #)"
b. Check DW-E/H is registered to H.323: Gatekeeper /SIP: Register Server or not. You need to have the following event generated - "9503: H323 GK/ SIP Register [xxx.xxx.xxx.xxx] found & registered"
c. Check the digit manipulation setting is correct or not. Make sure you have DM put into call flow editor, interface or VoIP.
d. For P2P call, make sure you have the address book setting for dialed number.

Q6. Cannot hear voice after the calls connect.

Answer:

a. Make sure the interface and host Enternet are well connected.
b. Ping each related IP to see network is working or not.
c. The voice codec priority should be matched both side.

Q7. *In H.323 Mode*: Failed to setup a fast start call.

Answer:

a. Make sure the far end "Fast Start" is enabled.
b. Check weather Gatekeeper can support Fast Start or not. (Some Gatekeeper are not.)
c. If you cannot hear early announcement, make sure the far and H.323 end point can listen RTP port before connect.

Q8. *In SIP Mode*: Failed to setup a normal call.

Answer:

a. Make sure the voice codec priority should be matched both side.
b. Make sure the DW-E/H is accept proxy call only or not.

Q9. *In SIP Mode*: Failed to hear the early media before call connected.

Answer:

a. Make sure the 180 SDP or 183 SDP are enabled.
b. Make sure the remote SIP end point can cut through voice before call connected.

Q10. Cannot send or receive the DTMF to/from far end VoIP end point.

Answer:

a. *In H.323 Mode:* Make sure DW-E/H and other endpoint use same DTMF relay mode (e.g. H.245 Alphanumeric.)
b. *In SIP Mode:* Make sure DW-E/H and other endpoint use same DTMF relay mode (e.g. SIP Info or RFC2833-payload type.)
c. *In SIP Mode:* Make sure the remote SIP end point's RTP payload type is supported or not.
d. If use Q.931 UUI DTMF Relay mode, make sure Gatekeeper can correctly forward Q.931 UUI when registering to Gatekeeper is set to true.

Q8. Does DW-E/H can cooperate with the Cisco VoIP products.

Answer:

The short answer is " yes". The following configuration example can be used for normal and fax call.

Example for H.323 Mode

```
voice service voip
fax protocol t38 ls-redundancy 1 hs-redundancy 1

voice class codec 100
codec  preference  1  g723r63
codec  preference  2  g729r8
codec preference 3 g711ulaw
codec preference 4 g711alaw

dial-peer voice 100 pots
application session
destination-pattern 8001
progress_ind progress enable 8
port 1/1/0

dial-peer voice 200 voip
destination-pattern 2T
voice-class codec 100
session target ras
dtmf-relay h245-signal h245-alphanumeric
fax rate 14400
fax-relay ecm disable
fax protocol t38 ls-redundancy 1 hs-redundancy 1
no vad
```

Example for SIP Mode

```
voice service voip
fax protocol t38 ls-redundancy 1 hs-redundancy 1
dial-peer voice 300 voip
destination-pattern 20T
rtp payload-type nte 110
voice-class codec 88
session protocol sipv2
session target ipv4:192.168.5.205
dtmf-relay rtp-nte
fax-relay ecm disable
fax rate 14400
```

```
fax protocol t38 ls-redundancy 2 hs-redundancy 2 fallback cisco
no vad

dial-peer voice 250 voip
application session
destination-pattern 2T
voice-class codec 2
session protocol sipv2
session target sip-server
fax rate 14400
fax protocol t38 ls-redundancy 1 hs-redundancy 1 fallback cisco

sip-ua

line con 0
speed 115200
line aux 0
line vty 0 4
```

Q9. DW-E/H cannot register to Cisco gatekeeper.

Answer:

a. Make sure GK IP and port number is correct.
b. If the gatekeeper can only allow predefined endpoint, make sure DW-E/H has it defined.
c. If you need prefix support, set it on GK.

Q10. External Radius server does not work.

Answer:

a. Make sure “VoIP Authentication method” is set to “ external AAA”.
b. Make sure “AAA” component is used in the call flow editor to take effect.
c. Make sure Radius server IP and port for authentication & billing are correct.

Q11. Internal Radius server does not work.

Answer:

a. Make sure “VoIP Authentication method” is set to “ internal AAA”.
b. Make sure “AAA” component is used in the call flow editor to take effect.
c. Make sure only debit user is used for VoIP caller.

Q12. PSTN hunting Group does not work.

Answer:

a. Make sure “PSTN hunting Group” component is used in the call flow editor to take effect.
b. Make sure “prefix” is met your target dialed number.

Quick Function Reference

A

Access Control..... 58
Account Manager.....13
Confirm Password..... 13
Password..... 13
User ID.....13
ANI ACL..... 58
Access Mode..... 59
ANI..... 59
Apply Change..... 65

C

Call Flow Editor..... 25
AAA..... 26
Answer..... 26
Branch.....26
CDV.....27
CIB..... 27
CIV..... 28
CTB..... 28
Cut Rule..... 28
Disc..... 29
DM..... 29
MakeCall..... 29
PA..... 30
PCUI..... 31
PD..... 31
PSTN L.H..... 31
Set Data..... 32
Start.....32
Quit..... 32

Call Routing.....63
Allow User Other.....63
Group ID.....63
Number To Route.....63

Config Manager..... 36

D

Debug Info.....79
DNIS ACL.....59
Access Mode..... 59
DNIS..... 59

E

Event Log **77**
Category 78
Date 78
Time 78
Type 77
Source 78

H

Hunting Group 62
Description 62
Group ID 62
Hunting Method 62
H.323 Configuration 50
Codec Priority 51
Connect Timeout (Q.931) (sec) 51
DTMF Relay 51
E.164 Tel 51
Fast Connect Mode 51
Fax Transport 51
Fax Rdepth 52
FS Enable 52
Gatekeeper IP 51
Gatekeeper RAS 51
G.711 Psize 52
G.723 Psize 52
G.729 Psize 52
H.245 Option 52
H.245 Tunneling 52
H.450 Service 52
Inbound DM Group 52
Max Call 52
Max Channel 52
Outbound DM Group 52
Q.931 Port 52
RAS Port 52
RAS Multicast IP 52
RAS Multicast Port 52
Register H.323 ID 51
Register Time To Live (sec) 51
Response Timeout (Q.931) (sec) 51
Register to Gatekeeper 51
T.38 ECM Mode 52

IP ACL **58**
Access Mode 58
IP Network 58

I

Interface..... 45
Apply to..... 50
CAS Idle Pattern..... 45
Card Slot..... 45
Clock Source..... 45
Dest Num Type..... 50
Dest Num Plan..... 50
Default Gateway.....45
Description..... 45
Dial Plan Management..... 50
EC Tail Length.....46
Interface ID.....45
Interface Type..... 45
IP Address..... 45
IP Precedence.....46
IP TOS..... 46
Jitter Min Delay.....46
Jitter Opt Factor.....46
License Key..... 45
PCM Idle Pattern..... 46
PCM Type..... 45
Prefix..... 50
Serial No..... 45
Silence Compress.....46
Subnet Mask..... 45
UDP Port Base..... 46

L

Line Detail..... 77
ANI String..... 77
Call Originate..... 77
DNIS String..... 77
Escape Time.....77
Line ID.....77
Line Status..... 77
PSTN Status..... 77
VoIP Status..... 77

Line Summary..... 76
Line ID..... 76
Successful Calls..... 76
Talk Time..... 76
Unsuccessful Calls..... 76

M

Monitor..... 76

N

Network..... 10
Domain name.....68
Dynamic DNS Registration..... 68
Host Name..... 68
Primary DNS Server..... 68

Secondary DNS Server..... 68

P

Ping..... 79
Prompt Manager..... 69
Close..... 72
Copy..... 73
Cut..... 73
Delete Remote File..... 75
New File..... 71
Open File..... 72
Open Remote File..... 72
Past..... 73
Pause..... 71
Play..... 71
Record..... 71
Redo..... 74
Save..... 71
Save as..... 73
Save Remote File..... 73
Save Remote File as..... 73
Stop..... 71
Undo..... 74
Zoom..... 74
Zoom in..... 74
Zoom out..... 74

R

Radius Setting..... 63
Acct IP..... 64
Acct Port..... 64
Acct Retry Interval (sec) 64
Auth IP..... 64
Auth Port..... 64
Auth Retry Interval (sec) 64
Auto Clean..... 64
Auto Inactive..... 64
Back Acct IP..... 64
Back Acct Port..... 64
Back Auth IP..... 64
Back Auth Port..... 64
Charge Method..... 64
Clean Filter..... 64
Clean Period..... 64
Inactive Period..... 64
Inactive prepaid..... 64
Max Retry..... 64
Response Timer (sec) 64
Secret Key..... 64
Switch Threshold..... 64
Relogin..... 14

Remote Teminal..... **80**
Routing Plan..... **63**

S

SIP Configuration..... **53**
180 SDP..... 53
183 SDP..... 53
183 to Alerting 56
Accept Proxy Call Only..... 54
Application Pool Page Size..... 55
AutoSend 183..... 56
Behind NAT..... 56
Caller ID Mode..... 56
Cancel General No Response Timer..... 55
Cancel Invite No Response Timer..... 55
Codec Seclection Pollicy 53
DTMF Relay Method..... 53
Fax Transmission..... 54
G.723 Bit Rate Used..... 53
General Linger Timer 55
General Pool Page Size..... 55
General Request Timeout Timer..... 55
Inbound DM Group 54
Invite Linger Timer..... 55
Local Codec 1~4..... 53
Max Call Leg..... 54
Max TCP Connection..... 54
Max Transaction 54
Max Register Client..... 54
Message Pool Page Size..... 55
Outbound Use TCP..... 54
Outbound Proxy Password..... 53
Outbound Proxy Port..... 53
Outbound Proxy Server 53
Outbound Proxy User..... 53
Overload Redirect..... 56
Public RTP IP..... 56
Public RTP Port..... 56
Public RTP Port Interval..... 56
Public Signal IP..... 56
Public Signal Port 56
Provisional Timer..... 55
Redirect Host..... 56
Redirect Port..... 56
Reject Unsupported Extension..... 55
Reliable Provision..... 54
Registar Password 53
Registar Port 53
Registar Server 53
Registar TTL 53

Registar User 53
Register Use TCP..... 54
Retransmission T1..... 55
Retransmission T2 55
Retransmission T4..... 55
Send 487 When Recv CANCEL..... 56
Send Receive Buffer Size 55
SIP Register..... 53
TCP Enable..... 54
TCP Port..... 54
UDP Port..... 54

SNMP..... 68
Access Rights..... 68
Community Name..... 68
System (Configuration)...... 44
Almost Expired Tone..... 45
Authentication Mode..... 45
CDR Mode..... 44
CDR Keepdays..... 44
Debug Level..... 44
Ext. AAA Failure Opt..... 45
First Digit Timeout..... 44
Hot Swappable..... 44
Inter Digit Timeout..... 44
Time Expired Notify..... 45
Version
System (Control) 66
Soft Reset..... 66
Restart..... 66
Shutdown..... 66
System Time Configuration..... 11
Daylight Bias..... 67
Daylight Start..... 67
Standard Start..... 67
Time Zone..... 67

T
Trunk Configuration..... 47
CAS Variance..... 47
CallID Transfer Type..... 49
Description..... 47
Dest Num Plan..... 49
Dest Num Type..... 49
Framing Method..... 47
Hunting Method..... 47
Inbound DM Group..... 48
Input Gain..... 49
Interface ID..... 47
Line Code..... 48

Local Ring Back..... 48
Outbound DM Group..... 48
Out Gain..... 49
Protocol Tag..... 48
PSTN Trace..... 48
Src Num Presen..... 49
Src Num Screen..... 49
Src Num Type..... 49
Termin Side..... 47
Trans Cap..... 49
Trunk ID..... 47
Trunk Mode..... 47
Trunk Type..... 47
Q.931 General Opt..... 49
Q.931 Incoming Opt..... 49
Q.931 Outgoing Opt..... 49

U

Upgrade..... 75
Apply..... 75
File Name..... 75
Upload..... 75
User ACL..... 60
Calling Rate..... 60
Password..... 60
Prepaid..... 60
Postpaid..... 60
Status..... 60
User ID..... 60

Index

A

Account Manager..... 13
Access Control..... 58
Address Book..... 41
Advance Configuration Reference..... 44
Apply Change..... 65
Authentication Authorization Accounting..... 63
Almost Expired Tone..... 44

C

Call Flow Editor..... 25
CDR Information..... 103
Configuration..... 44
Configuration Manger..... 36

D

Digit Manipulation..... 21
Debug Info..... 79

E

Event Log..... 77
Environment used in this section..... 15

G

Gatekeeper and SIP Proxy Mode Configuration..... 15

H

H.323 Configuration..... 50

I

Interface Configuration..... 45

L

Line Summary Status..... 76
Line Detail Status..... 77
Logon DW-E/H..... 9
Load a Configuration Manager..... 36

M

Monitor..... 76

N

Network Configuration..... 9

P

Peer to Peer Configuration……39
Ping……79
Prompt Manager……69

R

Radius Setting……63
Relogin……14
Remote Terminal……80
Routing Plan……60

S

SIP……53
SNMP……68
System Description……5
System Time Configuration……11

U

Upgrade……75